


! Attention: Please read the operating manual prior to operating the machine for the first time.

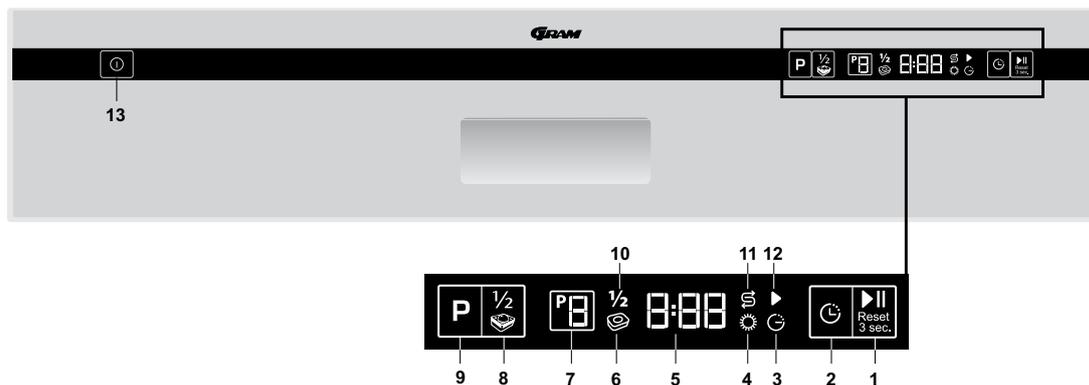

- 1 Start / Pause / Cancel Key
- 2 Time Delay Key
- 3 Time Delay Indicator
- 4 Rinse Aid indicator
- 5 Remaining Time / Time delay Indicator
- 6 Tablet Detergent Indicator
- 7 Programme Indicator
- 8 Half Load / Tablet Detergent Key
- 9 Programme Selection Key
- 10 Half Load Indicator
- 11 Salt Indicator
- 12 Start / Pause / Cancel Indicator
- 13 On / Off Key

Starting your machine

- Open the tap.
- Plug in to the socket.
- Open the door of the dishwasher.
- Place the dishes in accordance with the instructions in the user manual.
- Make sure that the upper and lower impellers rotate freely.
- Put sufficient amount of detergent in the detergent dispenser and close its lid.
- Make sure that indicators on programme display are illuminated by pressing On / Off key.
- Check if the Salt and Rinse Aid indicators light and add salt and / or rinse aid if needed.

⚠ Since different salt brands in the market have different particle sizes and since the water hardness may vary, dissolution of the salt in water may take a couple of hours. Therefore, Salt Indicator remains on for a while after adding salt into the machine.

- You may use Half Load / Tablet Detergent Key and Time Delay key features as necessary.

- Refer to "Programme table" to select a suitable programme.
- Select the desired programme with Programme Selection key.
- Press Start / Pause / Cancel key to start the programme.

⚠ Pay attention not to open the door of the machine when it is running. If you need to open the door, safety system will stop your machine. There may be a rush of vapour when you open the door of your machine; be careful. The programme will resume running when you close the door.

- When the programme you have selected comes to an end, an audible warning signal with intervals of 8 seconds will warn you to turn off your machine. This audible signal will warn you 10 times before it turns off.

- Press On / Off key to turn off your machine.
- Indicator lights on the programme display will turn off.

⚠ Leave your dishes in the machine for about 15 minutes after they are washed in order to have them cooled down.

Programme Table


Programme number	1	2	3	4 Reference*	5	6	7	8
Programme name	Pre-wash	30' Mini 30'	Delicate	eco	60' 60minA	Daily	Intensive	AUTO Auto
Cleaning temperature	-	35°C	40°C	50°C	60°C	65°C	70°C	40°C - 65°C
Degree of Soiling	Suitable for removing the remnants on the soiled dishes that will be kept waiting in the machine for a few days, and thus, for preventing the bad odor buildup.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.	Suitable for dishes that are not pre-cleaned but washed immediately.	Most economical washing program for the medium soiled daily dishes that are kept waiting.	Daily washing program at which the medium soiled dishes that are kept waiting are cleaned in the fastest way.	Suitable for heavily soiled dishes, pots and pans.	Suitable for the dishes which require extra hygiene such as articles for babies. Also suitable for heavily soiled dishes.	Determines the soiling degree of the dishes and sets the temperature and amount of the washing water as well as the washing time automatically. Suitable for all types of dishes.
Detergents A=25 cm ³ /15 cm ³ B=5 cm ³	-	A	A	A+B	A+B	A+B	A+B	A
Programme sequence (without options)	Pre-wash End	Wash Cold rinse Hot Rinse End	Pre-wash Wash Cold rinse Hot Rinse Dry End	Pre-wash Wash Cold rinse Hot Rinse Dry End	Wash Cold rinse Hot Rinse Dry End	Pre-wash Wash Cold rinse Hot Rinse Dry End	Pre-wash Wash Cold rinse Hot Rinse Dry End	The programme sequence is adjusted to the amount of soiling
Duration (min)	15	30	83	197	60	143	124	85-179
Water (l)	4	10,4	13,4	13	10,2	16,2	17,8	10,8-14,8
Energy (kWh)	-	0,8	0,88	0,93	1,32	1,26	1,97	0,90-1,50

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.

* Reference programme for testing institutes The tests in accordance with EN 50242 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme.

On / Off Key

When you press On / Off key, indicator lights illuminate on the display for ON position. The lights turn off in OFF position.

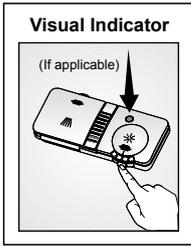

Rinse aid level indicator light

If this indicator light comes on, you have to refill rinse aid (If applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

Programme Selection Key

Refer to "Table of Programme Data and Average Consumption Values" to select a programme suitable for your dishes. Select the desired programme with programme selection key.

Half Load / Tablet Detergent Button

Half Load/Tablet Detergent Button allows you to turn on and off the Half Load and Tablet Detergent functions of your machine.

Half Load Function

If you want to run your machine without loading it completely, place your dishes into the machine as you desire. Press the On/Off button to turn on your machine. Press the Half Load/Tablet Detergent button after selecting the desired program until Half Load Indicator lights up, then press Start/Cancel button. With the Half Load option you can use every part of your lower and upper baskets and you can save from both water and power.

Tablet Detergent Function

Depending on the hardness level of the tap water, the Tablet Detergent function allows obtaining a better drying performance from the multi-purpose detergents such as 2in1, 3in1, 4in1, 5in1, etc., called as all-in-one detergents. The programs in which the tablet detergent function can be enabled is indicated in the Program Data and Table of Average Consumption Values. Tablet Detergent Indicator lights when the Tablet Detergent function is selected. Salt and Rinse Agent indicators turn off when this function is activated.

Turn on your machine by pressing the On/Off button to use the Tablet Detergent function. Press the Half Load/Tablet Detergent button after selecting the desired program until Tablet Detergent Indicator lights up, then press Start/Cancel button.

To use the Half Load and Tablet Detergent functions concurrently, turn on your machine by pressing the On/Off button and then press the Half Load/Tablet Detergent button until Half Load and Tablet Detergent Indicators illuminate together.

! Important:

If you have used the Half Load or Tablet Detergent features during the last program you used, Half Load or the Tablet Detergent function will remain active in the next washing program you will select. If you do not want to use these functions in the new program you have selected, press the Half Load/Tablet Detergent button until the indicator of the relevant function turns off.

Changing Warning Sound Volume

Press and hold Half Load / Tablet Detergent key for 5 seconds until S:03 appears on the display. Every time you press the Half Load / Tablet Detergent key, the warning sound level will change as - - Off, S:01 Low, S:02 Medium, and S:03 High. Wait for the machine to exit automatically from the adjustment menu. Factory setting of your machine is S:03.

Display

Water hardness level, Time Delay for the selected programme and warning message are displayed.

Time Delay

Using the Delayed Start button, you may delay the starting time of your program up to 9.5 hours with increments of 30 minutes. After delaying the start, press Start/Cancel button. Once the delay time is over, the selected program will start automatically.

Canceling the delay function

Keep the Start/Cancel button pressed for 3 seconds. The selected delay period will be cancelled.

As soon as the canceling starts, the water that may be remained in your machine will be drained for 30 seconds due to safety reasons.

Start/cancel button

When you press the Start/Cancel button, the washing program you have selected will start. (Start/Cancel indicator lights in Start mode, and turns off in Pause mode)

How to cancel the washing program

Press Start / Cancel button for three seconds to cancel a program that is already running. Release the button when symbol start flashing in the display. For a couple of minutes the machine will fulfill the necessary operations required for cancellation. Remaining time indicator displays "0:00".

! Important:

You may select and operate a new program following the program cancellation process. There might be residues of detergent or rinse aid left in the machine and/or on the pieces being washed depending on the step the previous program was in at the time of such cancellation.

Improper Loading Of Dishware

