

Dear Customer,

 
This Quick Start Guide is enclosed with detailed washing machine operating instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging the washing machine into the mains, remove the safety packaging and ensure the machine is level. Do not start the washing machine before it is properly set up.

Only wash delicate fabrics, synthetics, wool using designated programs. Such fabrics should only be washed in the maximum load sizes recommended (see page 2).

The correct washing machine operation extends its lifetime so make sure the drum seal is dry (leave the door ajar after washing). Do not clean the washing machine with harsh or abrasive detergents.

1 Preparing to wash



- Empty pockets
- Close all zips and button up duvet covers.
- Wash delicate and small items in a protective mesh laundry bag.
- Open the door of the washing machine by gripping the door and the door handle on the inside of the door.
- Insert the sorted clothes into the washing machine:
 - Cotton — max full drum.
 - Synthetics — max ½ of the drum.
 - Silk, wool — max 1/3 of the drum.
- Close the door, press firmly against the seal.

2 Add detergent

- Open the detergent drawer. Pull the handle.
- Pour the recommended dose of washing detergent into the appropriate compartment of the detergent drawer.
- Add fabric conditioner to the appropriate compartment if required.
 - || MAIN WASH detergent.
 - ⊗ Fabric softener or other special care liquids.
 - I PREWASH detergent.

3 Program selections

- Set the programme selector knob to the desired programme.
- Customize the programme to your needs — you can change the temperature, spin speed, or enable additional features.
- Select additional functions. The additional functions are described on the control panel and in the "Table of Wash Programmes" (see page 2).

4 Select START


- Close the appliance door.
- Set the programme selector dial to the desired programme (see page 2).
- Select additional functions or wash cycle parameters as required – according to your needs.
- Select Delay ranging from 0 to 24 hours.
- Then press the START/ PAUSE button

5 End of the wash


- End of the wash cycle is indicated by acoustic signal (if active). The display shows END and the door lock indicator goes out.
- Close the water valve.
- Turn washing machine off.
- Unplug the appliance from the mains.
- Open the door and remove laundry. Once clothes are removed, leave the door slightly ajar to allow the drum seal to dry before the door is closed properly. Leave the detergent drawer compartment slightly ajar to allow it to dry.



1. Detergent drawer
2. Drum
3. Programme selector dial
4. Control Panel / Display
5. Door handle
6. Pump filter cover

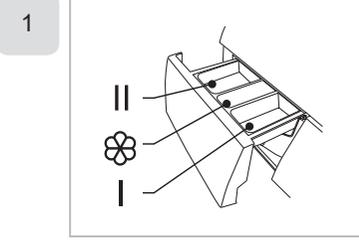

→ Touch and hold the Pause button for approx. 3 seconds to activate the Add+ system.

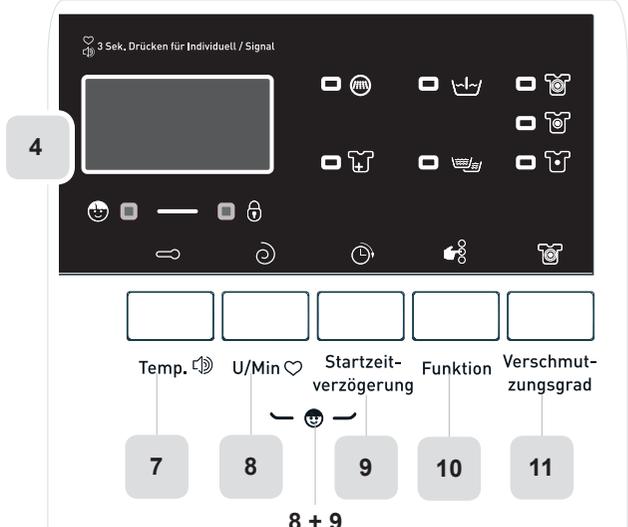

7. Temperature button
8. Spin Button
9. Delay button
10. Options
11. Soil Level

Acoustic Signal On/Off
8+9. Child Lock

TABLE OF WASH PROGRAMMES: **WA 494 070**

ITEM	Programme name	The default temperature [°C]	Max. spin speed [RPM]	Max. load [kg]	Additional functions available				Detergent drawer			Time [h:min]	Energy consumption [Wh]	Water consumption [l]		Type of laundry
					Soil level	Delay	Extra Rinse	Prewash	Prewash I	Main wash II	Fabric softener			Number of rinses		
1	Cotton	40°	1400	9.0		✓			○	●	○	03:39	1228	80	2	To increase the washing effects, washing time is increased.
2	20°	20°	1000	4.5		✓	✓		✗	●	○	01:11	97	53	2	Washing brightly colored clothes is a better way of protecting the colors.
3	Mix	40° 90°	800	9.0	✓	✓	✓		○	●	○	01:30	829	64	2	Mixed load consisting of textiles made of cotton and synthetics.
4	Wool	40°	600	2.0		✓	✓		✗	●	○	01:07	643	58	2	Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
5	Synthetics	40°	1200	4.5	✓	✓	✓		○	●	○	03:28	1041	58	2	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
6	Eco 40-60	--	1400	9.0		✓			✗	●	○	03:41	919	48	2	The "eco 40-60" program was developed to wash normally soiled cotton fabrics together in the same cycle for washing at 40 °C or 60 °C.
7	Cotton Extra	40°	800	9.0		✓			✗	●	○	03:48	649	39.2	2	In order to increase the washing effects, the washing time is extended.
8	Self Clean	90°	--	--		✓			✗	●	○	01:18	1142	8	1	Specially set in this machine to clean the drum and tube. It applies 90 °C high temperature sterilization to make the clothes washing more green. When this programme is performed, the clothes or other washing cannot be added. When proper amount of chlorine bleaching agent is put in, the barrel cleaning effect will be better. The customer can use this programme regularly according to the need.
9	Spin Only	--	1000	9.0		✓			✗	✗	✗	00:12	22	--	--	Extra spin with selectable spin speed.
10	Rinse&Spin	--	1000	9.0		✓			✗	✗	○	00:30	27	30	1	Extra rinse with spin.
11	Baby Care	60°	800	9.0	✓	✓	✓		○	●	○	01:53	1278	84	2	Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.
12	Sport	40°	800	4.5	✓	✓	✓		○	●	○	01:16	200	48	2	Washing the activewear.
13	Daily Wash	40°	1000	4.5		✓	✓		○	●	○	01:48	631	69	2	It is suitable for washing few and not very dirty clothes quickly.
14	Rapid 45'	40°	800	2.0		✓	✓		○	●	○	00:45	700	43	2	Washing few and not very dirty clothes quickly.
15	Quick 15'	Cold Water	800	2.0		✓			✗	●	○	00:15	13	40	2	Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry.
16	Hygienic	70°	800	5.0		✓	✓		✗	●	○	02:27	2126	55	2	Hygiene program

* The "eco 40-60" program was developed to wash normally soiled cotton fabrics together in the same cycle for washing at 40 °C or 60 °C.

** The most energy and water efficient wash programmes are generally those that run at lower temperature and for a long time.

*** Loading the washing machine to the full capacity indicated by the manufacturer for the respective wash programmes will save energy and water.

NOTE:

NOTE:

Real water temperature may differ from the declared wash cycle temperature.

Above mentioned time is an estimate and may differ from actual wash cycle time, depending on temperature, water pressure, load size, etc. The time is automatically updated during wash cycle. Displaying the same time for an extended period or abrupt changes are normal.

○ Use detergent or fabric softener if necessary,

● Detergent required, without which washing will be ineffective.

✗ Do not use detergent or fabric softener