


Amica

OPERATING INSTRUCTIONS EN

IO-WMS-3290
(03.2025/1)

WT 472 720

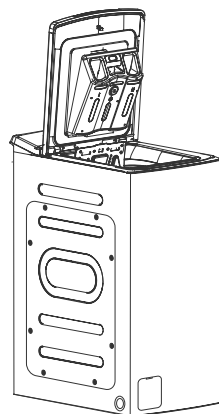

ONLY USE THE APPLIANCE WHEN YOU
HAVE READ AND UNDERSTAND
THE OPERATING
INSTRUCTIONS

WASHING MACHINES

UNPACKING



During transportation, protective packaging was used to protect the appliance against any damage. After unpacking, please dispose of all elements of packaging in a way that will not cause damage to the environment.

All materials used for packaging the appliance are environmentally friendly; they are

100% recyclable and are marked with the appropriate symbol.

Important! Packaging materials (bags, polyethylene, polystyrene, etc.) should be kept away from children during unpacking.

DISPOSAL OF OLD APPLIANCE



In accordance with European Directive 2012/19/EU and local legislation regarding used electrical and electronic goods, this appliance is marked with the symbol of the crossed-out waste container. This marking indicates that the appliance must not be disposed of together with other household waste after it has been used.

The user is obliged to hand it over to waste collection centre collecting used electrical and electronic goods. The collectors, including local collection points, shops and local authority departments provide recycling schemes.

Proper handling of used electrical and electronic goods helps avoid environmental and health hazards resulting from the presence of dangerous components and the inappropriate storage and processing of such goods.

CONTENTS

ECOLOGY IN PRACTICE	3
BASIC INFORMATION	5
SAFETY AND GERMENT CARE LABELS	6
INSTALL THE APPLIANCE	11
PRODUCT DESCRIPTION	14
TROUBLESHOOTING	19
PRACTICAL TIPS ON WASHING	22

ECOLOGY IN PRACTICE

For many years, Amica has consistently pursued pro-ecological policy. Concern for the environment is as important for us as the use of modern technology.

The development of technology has enabled our factories to become more environmentally friendly – we use less and less water, electricity and less waste water and solid waste is generated in the production.

A lot of attention is paid to materials used in production. We strive to use only those that do not contain harmful substances and make recycling and safe disposal possible after use.

Dear customer!

Thank you for choosing an Amica product. For years we have delivered high-quality appliances, so that household chores become a real pleasure. Before being packaged and leaving the manufacturer, the appliance was thoroughly checked with regard to safety and functionality. We also endeavour to make sure that modern technology in Amica products always goes hand in hand with a unique design.

Before using the appliance, please carefully read these Operating Instructions. Follow these instructions to avoid improper use and ensure long and reliable operation of the appliance. Learn the principles of the safe use to avoid accidents.

Store these operating instructions in a safe place to use them for reference whenever needed. These Operating Instructions contain all the necessary information that will make the use of your Amica appliance simple and fun. We also encourage you to find out more about other Amica appliances.

We hope using your new appliance is a pleasure.

Amica

BASIC INFORMATION



This washing machine is intended for domestic use only to wash textiles and clothes designed to be machine washed in a detergent bath.

Before plugging the washing machine into the mains, remove the safety packaging and ensure the machine is level. The manufacturer reserves the right to introduce changes, which do not affect operation of the appliance.

USAGE

- Carefully read the instructions below before using the appliance.
- Never use the appliance outdoors or anywhere the temperature may fall below freezing.
- The machine should not be operated by children or anyone who has not read the instructions.



Temperatures below 0°C can damage the washing machine! In the event of the machine being stored or transported in sub-zero temperatures, it should be left to acclimatise in a temperature above 0°C for 8 hours before being used.

MANUFACTURER'S DECLARATION

The manufacturer hereby declares that this product meets the requirements of the following European directives:

- Low Voltage Directive, **2014/35/EU**,
- Electromagnetic Compatibility (EMC) Directive **2014/30/EE**,
- Eco-design Directive **2009/125/EU**,
- RoHS Directive **2011/65/EU**,

and has been marked with the CE symbol and issued with a declaration of compliance made available to market regulators.




















The risk of death!	This appliance should not be used by children under 8 years of age, persons with reduced physical or mental capabilities, and persons who do not have sufficient skills to use this type of appliance. Such persons should be offered proper supervision or instructions on safe handling of appliance and related risks. Children must not play with the appliance or perform any maintenance-related activities. Children under 3 years of age must be kept away from the appliance unless continuously supervised.
	Children could get caught inside the appliance and get into a life-threatening situation.
	Animals and children may climb into the machine. Check the machine before every operation.
	Kids should be supervised that they do not play with the appliance.
	Glass door may be very hot during the operation. Keep kids and pets far away from the machine during the operation very wet rooms as well as in the rooms with explosive or caustic gas.
	Remove all packages and transport bolts before using the appliance. Otherwise, serious damage may result.

	Plug must be accessible after installation.
Risk of explosion!	Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) This may result in fire or explosion.
	Before hand thoroughly rinse items of washing by hand.
Installing the product!	This washing machine is for indoor use only.
	It isn't intended to be built-in using.
	The openings must not be obstructed by a carpet.
	Washing machine shall not be installed in bath room or very wet rooms as well as in the rooms with explosive or caustic gases.
	The washing machine with single inlet valve only can be connected to the cold water supply. The product with double inlet valves should be correctly connected to the hot water and cold water supply.

Installing the product!	Plug must be accessible after installation.
	Remove all packages and transport bolts before using the appliance. Otherwise, serious damage may result.
Risk of damaging appliance!	Your product is only for home use and is only designed for the textiles suitable for machine washing.
	Do not climb up and sit on top cover of the machine.
	Do not lean against machine door.
	<p>Cautions during Handling Machine:</p> <ol style="list-style-type: none"> 1.Transport bolts shall be reinstalled to the machine by a specialized person. 2.The accumulated water shall be drained out of the machine. 3.Handle the machine carefully. Never hold each protruded part on the machine while lifting. Machine door can not be used as the handle during the conveyance. 4.This appliance is heavy. Transport with care.
	Please do not close the door with excessive forces. If it is found difficult to close the door, please check if the clothes are put in or distributed well.

Risk of damaging appliance!	It is forbidden to wash carpets.
Operating the appliance!	Before washing the clothes at first time, the product shall be operated in one round of the whole procedures without the clothes inside.
	Flammable and explosive or toxic solvents are forbidden. Gasoline and alcohol etc. Shall not be used as detergents. Please only select the detergents suitable for machine washing, especially for drum.
	Make sure that all pockets are emptied. Sharp and rigid items such as coin, brooch, nail, screw or stone etc. may cause serious damages to this machine.
	Please check whether the water inside the drum has been drained before opening its door. Please do not open the door if there is any water visible.
	Be careful of burning when the product drains hot washing water.
	Never refill the water by hand during washing.
	After the program is completed, Please wait for two minutes to open the door.

UNDERSTANDING THE SYMBOLS ON CLOTHES LABELS

Washing				
	boil at 90°C	normal wash at 60°C	normal wash at 40°C	Do NOT wash!
				
	delicate		handwash	
Chemical cleaning				
	all solvents	all except TRI	petrol only	NO Dry clean!
Tumble dryer				
	normal	low	high	Do NOT dry!
Ironing				
	110°C	150°C	200°C	Do NOT Iron




Always pay attention to the symbols on garment labels when choosing a washing programme.

INSTALL THE APPLIANCE

1

Remove the transit bolts


(keep the bolts for future use, e.g. when moving house).

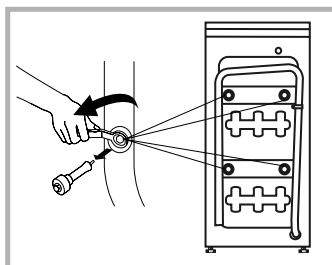

- unscrew the 4 transit bolts with a spanner,
- stop up the holes with the stoppers enclosed in the accessories bag.
- remove the rubber and plastic transport brackets from the sockets along with the washers and bolts.




Before use, remove the polystyrene support under the motor.

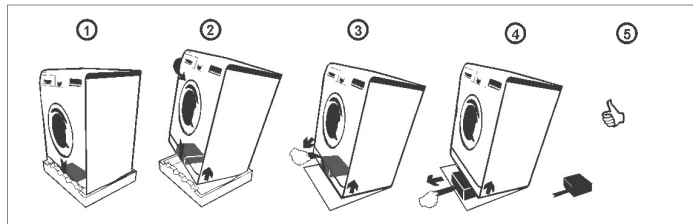

2

Position and level the washing machine


- place the washing machine on a solid, level surface,
- loosen the plastic washer (2)
- Level the appliance by adjusting the legs (1)
- lock with washers (2)

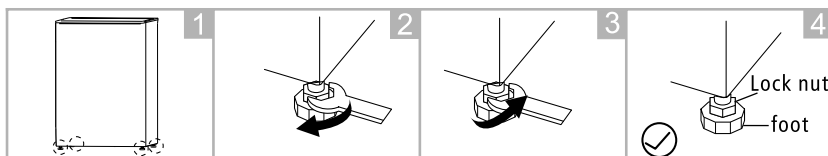

After positioning and levelling the appliance, check that it is stable by pressing down each corner and ensuring it does not move!

Connect the water supply

- Use only the new hoses supplied with the machine. Do not re-use hoses.

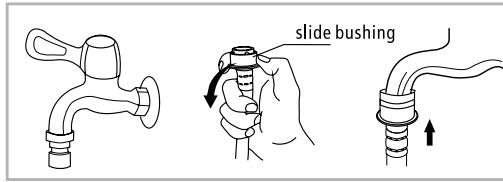

- A supply hose with seals is inside the drum of the machine.
Water pressure min 0.1 MPa (1 bar), max 1 MPa (10 bar).



- 1). after connecting, make sure the hose is not twisted
- 2) after connecting the hose and the valve, check they are sealed tight
- 3). regularly check the condition of the hose.




Supply the machine with cold water only.

Water drain

- The drain hose is at the back of the machine. Fix the drain hose so that it does not move while the washing machine is in operation.

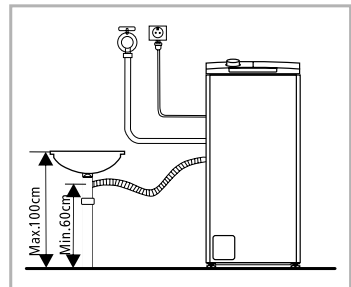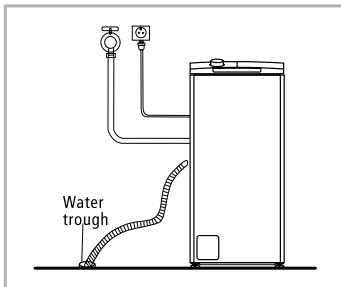

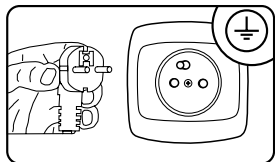Connect to power supply


- Electrical wall outlet where the appliance is connects must be in a visible and accessible place,
- Only plug the appliance into a properly installed socket with an earthing pin,
- Do not use an extension cord to connect the appliance,
- in the event of the power cord being damaged, it must be replaced by an authorised service technician,
- the electrical system to which the appliance is to be connected must be protected with a 10 A fuse.

Prepare to wash:






- Small items such as coins, paper clips, needles, etc., may damage the laundry and the washing machine, you should therefore follow a few important recommendations:
 - 1). Empty pockets
 - 2). Remove all metal items
 - 3.) Delicate items such as bras or stockings should be washed in protective mesh laundry bag
 - 4). Close zippers and fasten buttons
 - 5). Remove any foreign objects from the appliance.

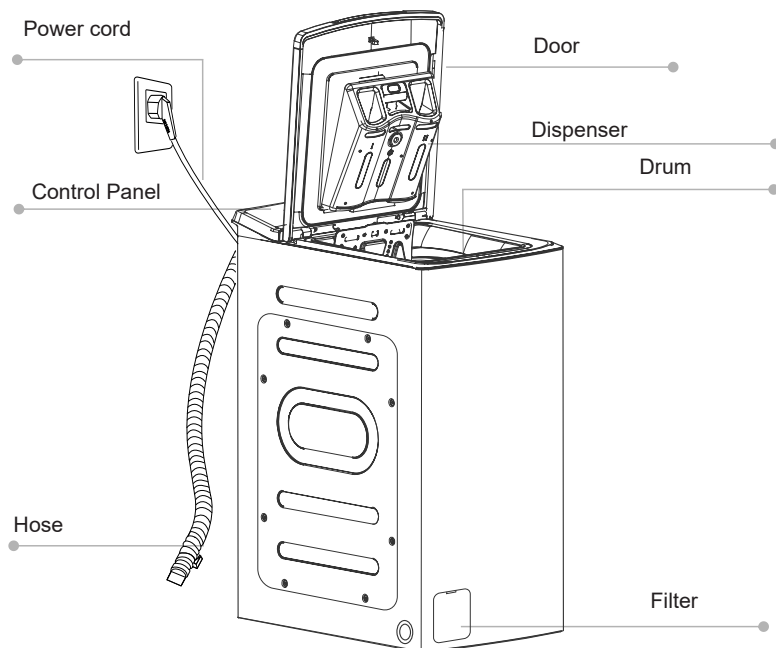FEATURES AND COMPONENTS

DESCRIPTION OF THE APPLIANCE



Accessories:

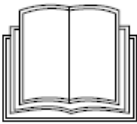
				
Transport opening plug	Cold water supply hose	Acoustic Sponge	Drain hose bracket (option)	Operating instructions

QUICK START


Warning!

- Before starting the washing machine, make sure it is properly installed .


1. Before washing

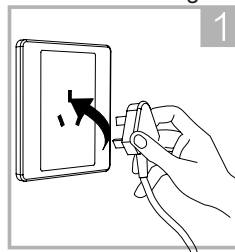

connect to the power supply

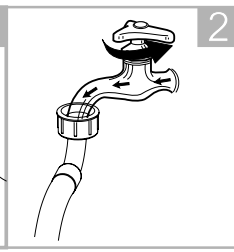


open the valve

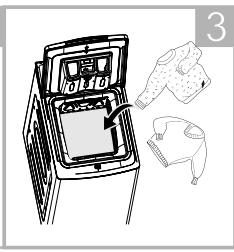


put in the laundry

Note!


- Only add detergent to drawer I if prewash has been selected in washing machines with this function.
- Make sure that the drum door closure hooks are properly closed.

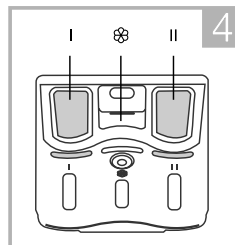


add detergent

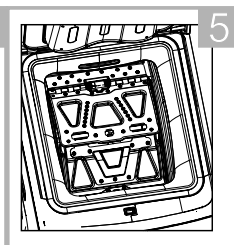


close the drum door

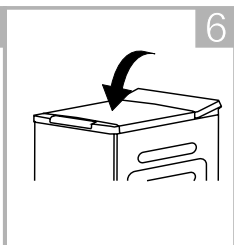

close the appliance door.

 


- The tailgate latches must be properly secured.

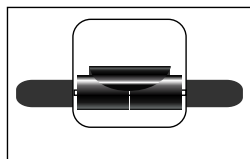

- Each time before washing, check the roller, it must turn freely.

2. Washing

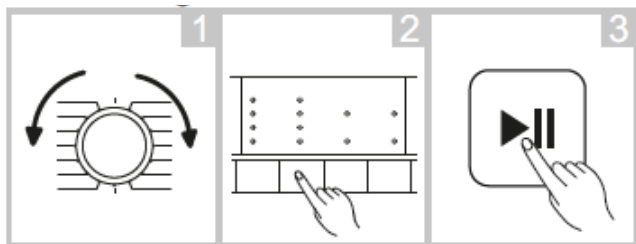


Select a programme

Select the function or default programme

Start the appliance

- ### 3. After washing is finished
- "End" is shown on the display.

DISPLAY AND CONTROL PANEL

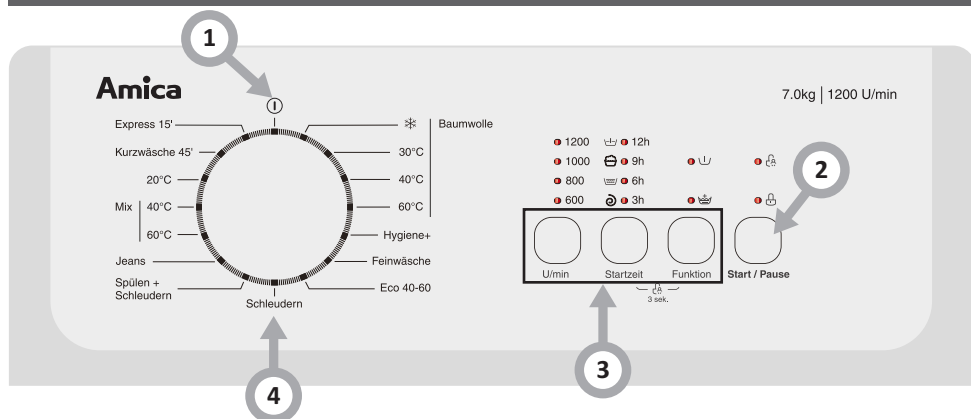

NOTE:

Figures are for illustrative purposes only Individual models may vary.

1. Power

Product is on/off.

2. Start/Pause


Press the button to start or pause the washing cycle.

3. Option

This allows you to select an additional function and will light when selected.

4. Programmes

Available according to the laundry type.

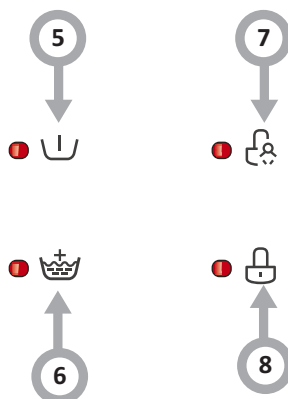

5. Prewash

6. Extra Rinse

7. Child Lock

8. Door lock

Spin speed selector button

- Press this button to set the spin speed when water is being pumped out of the washing machine. Press the Spin button to change the settings. Depending on the programme selected, the display shows the following values: 0 (spin off), 600, 800, 1000, 1200.

Startzeit

- Set the Delay function:
 1. Select a programme;
 2. Press the Delay button to choose the time (the delaying time is 3h-6h-9h-12h);
 3. Press [Start/Pause] to commence the delay operation



Choose the Programme



Setting time



Start

Pre Wash

- Extra washing function before the main washing cycle starts to increase the washing performance.

Note: Detergent needs to be added to the compartment I.

Extra Rinse

- The laundry will undergo an extra rinse after selecting this function.

Child Lock

- This function locks function buttons to prevent settings being changed or operation interrupted by children. Press and hold the Delay button and Function buttons for 3 seconds to activate the Child Lock during a washing cycle. To release Child Lock during the cycle, press and hold the same buttons for approximately 3 seconds



When If the Child Lock function is activated, the display will show the ☹️ symbol.

When you turn off or unplug the washing machine or the washing cycle ends, the Child Lock function will not deactivate.

USING THE APPLIANCE

1

Select Programme

- Set the programme selector turning it left or right.
- Customize the programme to your needs — you can change the temperature, spin speed, or enable additional features (see table of wash programmes).
- Press the Start/ Pause button

2

Time Remaining

To set the Time Remaining:



- Close the appliance door.
- Set the programme selector dial to the desired programme
- Select additional functions or wash cycle parameters as required – according to your needs. (see Table of wash programmes.)
- Press the Delay button.
- Select time remaining ranging from 3/6/9/12 hours.
- Press the Start/ Pause button The appliance will be set in delay mode.
- The wash programme will be automatically terminated.



When you set the Time Remaining option, the display will show the time remaining to the end of the programme.

3

End of the wash cycle

- End of the wash cycle is indicated by acoustic signal (if active). At the end of washing, the  and  light will flash.
- Close the water valve.
- Unplug the appliance from the wall outlet.
- Open the door and remove laundry.

TROUBLESHOOTING

Description	Reason	Solution
Washing machine does not start	The door is not closed properly.	Restart after closing the door. Make sure that laundry is not blocking the door.
The door cannot be opened	The appliance protection function is active.	Disconnect the power, restart the appliance
Water Leakage	The connection between the water supply hose or drain hose and the tap or washing machine is leaking.	Check and properly install attach water hoses. Clean the water drain hose.
Detergent residue in the drawer	The detergent is damp or lumpy	Clean and wipe the detergent drawer.
The indicator or display does not light up	There is no connection to the electronics or the wires do not connect properly.	Check that the power is not turned off and that the power cord plug is properly inserted into the socket.
Abnormal noise		Make sure that the shipping bolts have been removed. Make sure the appliance is placed on a solid, level floor.

LED display models:

Description		Reason	Solution
Speed	Delay	Door is not closed properly.	Restart after the door is closed Check if the clothes is stuck.
●	●		
●	●		
○	●		
○	●		
Speed	Delay	Water injecting problem while washing.	Check if the water pressure is too low Straighten the water pipe Check if the inlet valve filter is blocked
●	●		
●	●		
●	●		
○	●		
Speed	Delay	Overtime water draining	Check if the drain hose is blocked
●	●		
●	●		
○	●		
●	○		
Speed	Delay	Water overflow	Restart the washer
●	●		
●	●		
●	○		
○	●		
Others		Others	Please try again first, call up service line if there are still troubles

○ Light flash

● Light off

Note!

After the check, activate the appliance. If the problem occurs or the display shows other alarm codes again, contact the service.

MAINTENANCE AND CLEANING







Never clean the appliance body or plastic parts using solvents or harsh, abrasive detergents (e.g. washing powders or creams)! Use mild liquid detergents and soft cloths only. Do not use sponges.

1

Clean the pump filter

- Clean the pump filter every 20 washes or so. Neglecting to clean the filter may result in problems with draining water from the appliance!

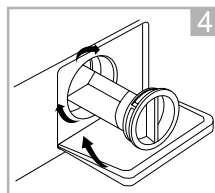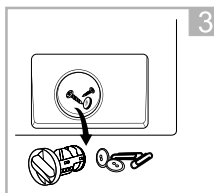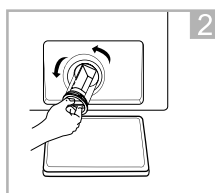
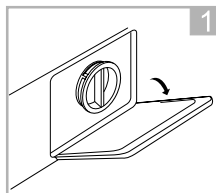


- 1). Open the filter cover using hand or flat screwdriver,
- 2). Open the filter by turning it counterclockwise
Drain the remaining water into the shallow vessel
- 3). Remove any foreign objects from the appliance.
- 4). Screw on the filter and close the bottom cap.

2

Clean the water supply valve

- Replace the filter following the procedure in reverse order.

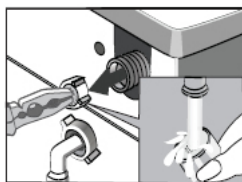
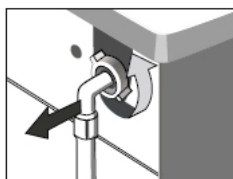


- 1). Unscrew on the water supply hose,
- 2). Use forceps to grasp the filter mesh pin,
- 3). Remove and clean the filter.

3

Clean the detergent drawer

- Should be cleaned at least once a month.

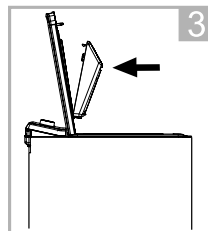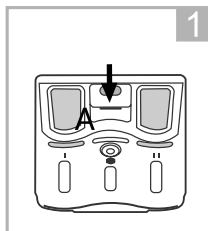

- 1). Pull out the detergent drawer.
- 2). Rinse under running water, clean with a brush or a piece of fabric,
- 3). Push the drawer back in.

PRACTICAL TIPS ON WASHING

DETERGENTS AND LAUNDRY ADDITIVES




It is recommended to use a general-purpose laundry detergent powder for the full range of temperatures according to the manufacturer's instructions on the detergent packaging.

Only powder detergent should be used.

1

Detergents

- Pour the detergent into the drawer compartment marked **II**
- Pour the pre-wash detergent into the drawer compartment marked **I**

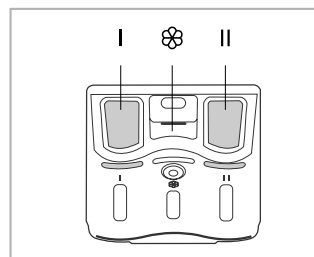

2

Fabric softeners added to the rinse

- Pour the fabric softener into the drawer compartment marked
- Do not exceed the maximum level marked on the drawer compartment. This detergent will be used for the final rinse.



For washing whites it is recommended to use the washing powder.

FIRST WASH

- Before washing for the first time, put the appliance through one high temperature cycle without a load, according to the following procedure:
 - 1). connect the washing machine to the power supply,
 - 2). open the water valve,
 - 3). set the programme selector dial to washing at high temperature, add a suitable detergent and press Start/Pause.

SOIL

1

Stubborn stains

- Before washing underwear, apply an additional stain remover according to the instructions for use.

2

Heavy soil

- in order to achieve a better result, wash less laundry,
- add more detergent.
- Rinse the washing machine after washing heavily soiled garments (e.g. work clothes) or clothing that loses fibres. To do this, run the wash cycle at 60°C, for example Cotton or Synthetics without any load.

3

Light soil

- See Conservation.

CONSERVATION

Reduce energy and water consumption

- Garments which are only lightly soiled should be washed on the Rapid Wash setting.
- For most programmes, the washing machine detects load.
For partial load, when using the QUICK WASH programme, the appliance will reduce water and energy consumption and shorten the wash cycle.
- The most energy and water efficient wash programmes are generally those that run at lower temperature and for a long time.
- Loading the washing machine to the full capacity indicated by the manufacturer for the respective wash programmes will save energy and water.

WATER HARDNESS

- Hard water causes scale deposition. Information about water hardness is available from the nearest water works. We recommend that you use water softener for each washing.

POWER OUTAGE (PROGRAMME MEMORY)

- Power outage or unplugging the appliance does not cancel the set programme. The programme is memorised and resumes when power is restored. Do not open the appliance doors during a power outage.

LOAD

- Maximum drum capacity 7 kg.
- Load the laundry into the drum according to the following instructions:
 - 1). cotton, denim, children's clothes – max full drum (do not force clothes into the drum as this will reduce the quality of the wash),
 - 2). Synthetics – max $\frac{1}{2}$ of the drum,
 - 3). Delicates fabrics – $\frac{1}{3}$ of the drum.



Do not overload the appliance. Overloading the appliance may damage the clothes being washed! If you overload the appliance the OVL is shown appears on the display — remove excess laundry from the drum and restart the washing machine. The maximum load amounts depending on the programme are given in table of programmes.

LOAD DISTRIBUTION CONTROL

- The appliance features load distribution control system.

Before spinning, this checks the distribution of clothes inside the drum. In the event that too great an imbalance is detected, the system makes several attempts to rearrange the clothes inside the appliance. Sometimes these attempts to distribute the load are not successful. Problems may be caused by terrycloth robes washed together with other types of laundry, such as bed sheets that formed a bundle around other items of laundry.
- The system may then respond in two ways:
 - 1). accept the uneven distribution of garments and reduce spin speed,
 - 2). cancel the spinning.

In either case, after washing cycle is finished open the appliance door, remove the laundry by hand, close the door and select the spin setting again.

DOOR LOCK

- The washing machine is equipped with a lock which prevents the door from being opened during wash cycle. Once a wash cycle is complete, the door lock is automatically released. In order to open the door during the wash program, press PAUSE button and wait to unlock the door.



If the temperature inside the drum is high, the door may remain blocked until the water temperature has dropped below 60°C.



Before opening the door of the washing machine check whether there is water in the drum.

DELICATE FABRICS

1

Select Programme

- Select the appropriate wash programme: Synthetics, Wool.

2

Load

- Avoid overloading the washing machine — the maximum load is 1/3 kg for delicate fabrics, see "Loading."

ADD DETERGENT

1

Not enough detergent

- the laundry turns grey, lumps of fat form, lime scale is deposited.

2

Too much detergent

- A lot of foam, ineffective washing, detergent incompletely rinsed from fabrics.

For more information about the product, please refer to the EU EPREL Product Database at <https://eprel.ec.europa.eu>. For more information, please use your mobile device to scan the QR code on the energy label or enter the product model listed on the energy label in the EPREL search engine <https://eprel.ec.europa.eu/>

WARRANTY AND AFTER SALES SERVICE

Warranty

Warranty service as stated on the warranty card. The manufacturer shall not be held liable for any damage caused by improper use of the product.


Service

- The manufacturer recommends that all repairs and adjustments be carried out by the Factory Service Technician or the Manufacturer's Authorized Service Point. For safety reasons, repairs should be referred to professionals.
- Repairs carried out by unqualified persons may seriously endanger the appliance user.
- Pursuant to Commission Regulation (EU) 2019/2023, the minimum availability period for spare parts necessary to repair the appliance is 7 or 10 years depending on the type and purpose of the spare part.
- The list of spare parts and the ordering procedure are available on the websites of the manufacturer, importer or an authorized representative.
- The minimum warranty period for the appliance offered by the manufacturer, importer or authorized representative is given in the warranty card.
- The warranty shall be void if you make any independent adaptations or alterations, tamper with seals or other appliance safety devices or its parts or interfere with the appliance contrary to operating instructions.

In the event of appliance malfunction, request assistance or repair.

If your appliance needs repair, please contact the service centre. Please see warranty card for address and contact details of our service centre. Before contacting us, please have ready the appliance serial number, which can be found on the identification sticker: For your convenience, please write it down below:

--	--	--	--	--	--	--	--	--	--	--	--	--	--

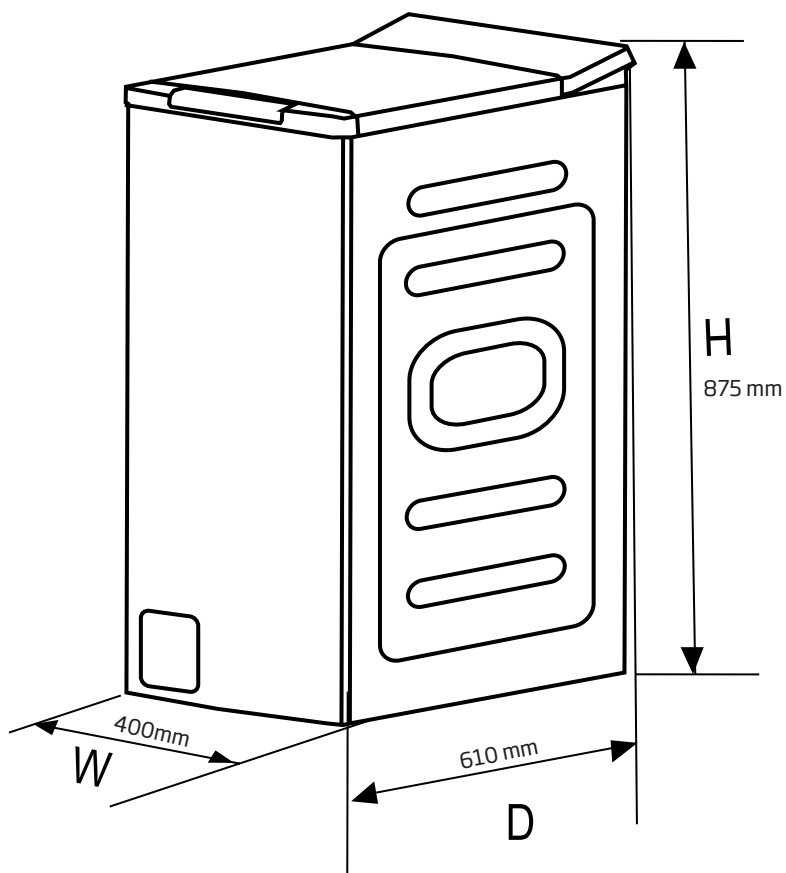



AMICA S.A.

UL. MICKIEWICZA 52
64-510 WRONKI

TEL. 67 25 46 100

FAX 67 25 40 320

WWW.AMICA.PL