

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

→ Press the Program button.

2 Dispense detergent

→ Press the latch to open the detergent dispenser.

→ Add detergent to the dispenser.

3 Check the special salt level

→ Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

→ Remove food leftovers from the dishes

→ Place the dishes in the racks according to loading guidelines.

→ It is recommended to load the lower rack first, then the upper rack.

5 Select the wash programme

→ Press the Program button to select a desired "Wash program". And press the Start/pause button.

6 Start your dishwasher

→ Close the dishwasher door.


→ The dishwasher will start a wash programme.

7 Turn off the appliance

→ Turn off the appliance using the [on/off] button

8 Remove dishes from the appliance

→ When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

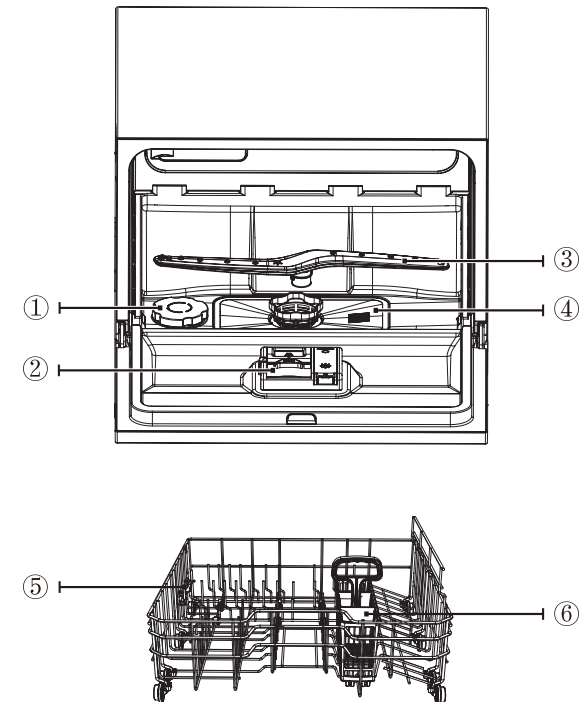

Features and components:

1. Salt container
2. Dispenser
3. Spray arm
4. Filter assembly
5. Basket
6. Cutlery basket (depends on model)

**NOTE:**

Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: OMB 54435

ITEM	Programme name	The default temperature [°C]	Type of soil	Type of cycle				Duration (min.)*	Power consumption (kWh)*	Water consumption (l)*
1	**ECO 	64°	Eco-friendly mode, saving energy and water, suitable for general cleaning needs.	Pre-wash	Wash 64°C	Rinse	Drying	260	0.49	6.7
2	Intensive 	67°	Powerful cleaning mode,suitable for dishes, pots and pans with heavy stains.	Pre-wash	Wash 67°C	Rinse	Drying	148	0.72	9.4
3	Quick 	40°	Suitable for cleaning the slightly sticky fresh food residues at the fastest speed.	Wash 40°C	Rinse			29	0.1	4.8
4	Baby Care 	69°	High temperature sterilization, suitable for cleaning baby products.	Wash 69°C	Rinse	Drying		132	0.65	7.2
5	90 min 	60°	90 min cleaning mode, suitable for moderately contaminated tableware.	Wash 60°C	Rinse	Drying		90	0.61	7.2
6	Hygiene 	75°	Suitable for heavily soiled dishes requiring hygienic washing.	Pre-wash	Wash 75°C	Rinse	Drying	158	0.75	9.5
7	Glasscare 	42°	Daily cleaning mode, suitable for moderately contaminated tableware.	Wash 42°C	Rinse	Drying		122	0.51	7.2
8	Auto 	61°	Automatic detection of tableware fouling degree, suitable for different types of tableware mixed washing.	Pre-wash	Wash 61°C	Rinse	Drying	108-160	0.72-0.78	9.4
9	Self clean	72°	Used to clean the dishwasher.	Wash 72°C	Rinse	Drying		97	0.65	6.9

** Standard programme This is a reference program for research institutes. Tests according to EN 60436. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.