

## Dear Customer,

 
This Quick Start Guide is enclosed with detailed washing machine operating instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your appliance into the mains power, remove the transport bolts and level the appliance. Do not start the washing machine before it is properly set up.

Only wash delicate fabrics, synthetics, wool using designated programs. Only load such fabrics according a table of the maximum load sizes (see page 2).

The correct appliance operation extends its lifetime so make sure the drum seal is dry (leave the door ajar after washing). Clean the appliance with mild cleaning agents, do NOT scrub with abrasive agents.

## 1 Before you start washing



- Empty pockets.
- Close all zips and button up duvet covers.
- Wash delicate and small items in a protective mesh laundry bag.
- Open the appliance door by pressing the handle on the inside.
- Insert the sorted clothes into the washing machine:
  - Cotton — max full drum.
  - Synthetics — max ½ of the drum.
  - Silk, wool — max ¼ of the drum
- Close the door, press firmly against the seal.

## 2 Add detergent

- Open the detergent drawer by pulling the handle. Pour the recommended dose of washing detergent into the appropriate compartment of the detergent drawer.
- Add fabric conditioner to the appropriate compartment if required.
  - III MAIN WASH detergent.
  - ⊗ Fabric softener or other special care liquids
  - I PREWASH detergent.

## 3 Select a washing programme

- Set the programme selector knob to the desired programme.
- Customize the programme to your needs — you can change the temperature, spin speed, or enable additional features.
- Select additional functions - described in the "Table of programmes" (see page 2).

## 4 Select START


- Close the appliance door.
- Turn the programme selector to the desired programme (see page 2).
- Select additional functions or wash cycle parameters as required – according to your needs.
- Select Time Remaining ranging from 0 to 24 hours.
- Then press the START/ PAUSE button

## 5 End of the wash


- End of the wash cycle is indicated by acoustic signal (if active). The display shows END and the door lock indicator light goes out.
- Close the water valve.
- Turn washing machine off.
- Unplug the appliance from the wall outlet.
- Open the door and remove laundry. Once laundry is removed, leave the door slightly ajar to allow the drum seal to dry before the door is closed properly. Leave the detergent drawer compartment slightly ajar to allow it to dry.



1. Detergent drawer
2. Drum
3. Programme selector dial
4. Control panel / Display
5. Door handle
6. Pump filter cover

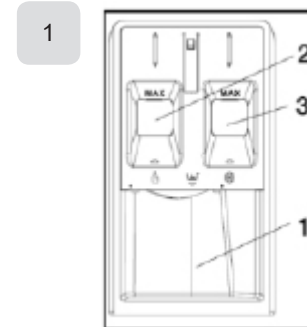



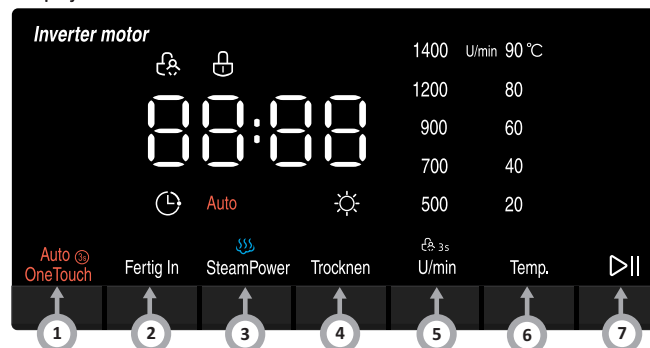












Display:



1. Auto One Touch button
2. Time Remaining button
3. SteamPower button
4. Dry button
5. Speed Button
6. Temperature button
7. Start/Pause button

TABLE OF PROGRAMMES: WAT 404 050 / WAT 404 600

ITEM	Programme name	The default temperature [°C]	Max. spin speed [RPM]	Maximum load [kg] Washing/ Drying	Additional functions available				Detergent drawer			Time [h:min]	Power consumption [kWh]	Water consumption [l]	Number of rinses	Type of laundry
					Auto One Touch	Time Remaining	Drying	Steam-Power	Prewash <sup>I</sup>	Main wash <sup>II</sup>	Fabric softener <sup>III</sup>					
1	Eco 40-60 	40°	1400	8,0/5,0			✓		✗	●	✗	--	--	--	2	The "Eco 40-60" programme is used to wash normally soiled cotton fabrics, which can be washed at 40°C or 60°C in the same cycle.
2	Cotton 20°	Normal	900	2,0/--		✓			✗	●	○	00:39	0,043	44,8	2	For a small load of laundry that is prone to colour fading.
3	 Express 	Normal	900	1,0/1,0		✓	✓	✓	✗	●	○	00:15	0,019	29,1	2	Very short programme, suitable for lightly soiled laundry, for example a small amount of laundry.
4	Drying 	--	1400	--/5,0			✓		✗	✗	✗	02:02	--	--	-	For drying wet cotton fabric.
5	Down 	40°	900	2,0/2,0		✓	✓		✗	●	○	01:43	0,290	67,0	3	For washing machine-washable down jackets.
6	Rinse and spin 	--	1200	8,0/5,0		✓	✓		✗	●	○	00:13	0,019	20,1	1	Combines rinse and spin for loads that require an extra rinse cycle. Also for loads that require rinsing only.
7	Spin 	--	1200	8,0/5,0		✓	✓		✗	✗	✗	00:08	0,016	--	-	This cycle uses spinning to reduce the drying time for heavy fabrics or items that require special care and are hand washed.
8	Drum Clean 	90°	700	--/--		✓	✓		✗	●	○	02:49	0,673	49,5	1	Cleans the drum by removing dirt and bacteria. Make sure the drum is empty.
9	 Linen	20°	1200	6,0/--		✓		✓	✗	●	○	01:19	0,105	65,6	3	For large items such as blankets, curtains and bedspreads.
10	Sport	20°	900	3,0/--		✓			✗	●	○	00:55	0,063	50,5	2	Sports wear and leisure wear with Microfibre.
11	 Baby Pro 	40°	1200	5,0/5,0		✓	✓	✓	✗	●	○	01:23	0,199	67,5	3	Use this programme to wash your baby's clothes to make them cleaner and improve rinsing efficiency to protect baby's skin.
12	Wool	Normal	700	1,0/--		✓			✗	●	○	00:50	0,035	52,5	2	Note! Do not machine wash woollen fabrics if the cloth tag prohibits.
13	Antiallergic	80°	1200	3,0/--		✓			✗	●	○	02:07	1,178	66,9	2	The washing machine can efficiently neutralize certain allergens and attain an antiallergic effect by utilising a high temperature of 60°C, which also serves to achieve a sterilizing effect.
14	 Cotton 	20°	1400	8,0/5,0		✓	✓	✓	✗	●	○	00:57	0,078	48,8	2	Hard-wearing fabrics, cotton heat-resistant fabrics or underwear.
15	 Mix 	20°	1400	8,0/5,0		✓	✓	✓	✗	●	○	00:52	0,073	50,2	2	For mixed fabrics such as cotton, linen and synthetics.
16	Auto One Touch	20°	900	5,0/--					✗	●	○	00:35	0,067	49,6	2	A special programme that can be started simply by pressing the Auto One Touch button.

\* The "Eco 40-60" programme is used to wash normally soiled cotton fabrics, which can be washed at 40°C or 60°C in the same cycle.

NOTE: Actual water temperature may differ from the declared wash cycle temperature.

\*\* The most efficient programmes in terms of energy and water consumption are generally those that are run at lower temperatures and for longer time.

NOTE: Above mentioned time is an estimate and may differ from actual wash cycle time, depending on temperature, water pressure, load size, etc. The time is automatically updated during wash cycle. Displaying the same time for an extended period or abrupt time indication changes are normal.

\*\*\* You will save energy and water by loading your household appliance to the full capacity indicated by the manufacturer for the appropriate programmes.

○ Use detergent or fabric softener if necessary.

● Detergent required, without which washing will be ineffective.

✗ Do not use detergent or fabric softener.