

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

## 1 Turn on the appliance

- Close the dishwasher door, press the on/off button. Power indicator will be on

## 2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

## 3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

## 4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

## 5 Select the wash programme

- Press the Program button to select the desired program. Press the Start/Pause button, after 10 seconds, the dishwasher will start.

## 6 Start your dishwasher

- Close the dishwasher door.
- The dishwasher will start a wash programme.

## 7 Turn off the appliance


- Turn the appliance off using the On/Off button.

## 8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

## 9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator

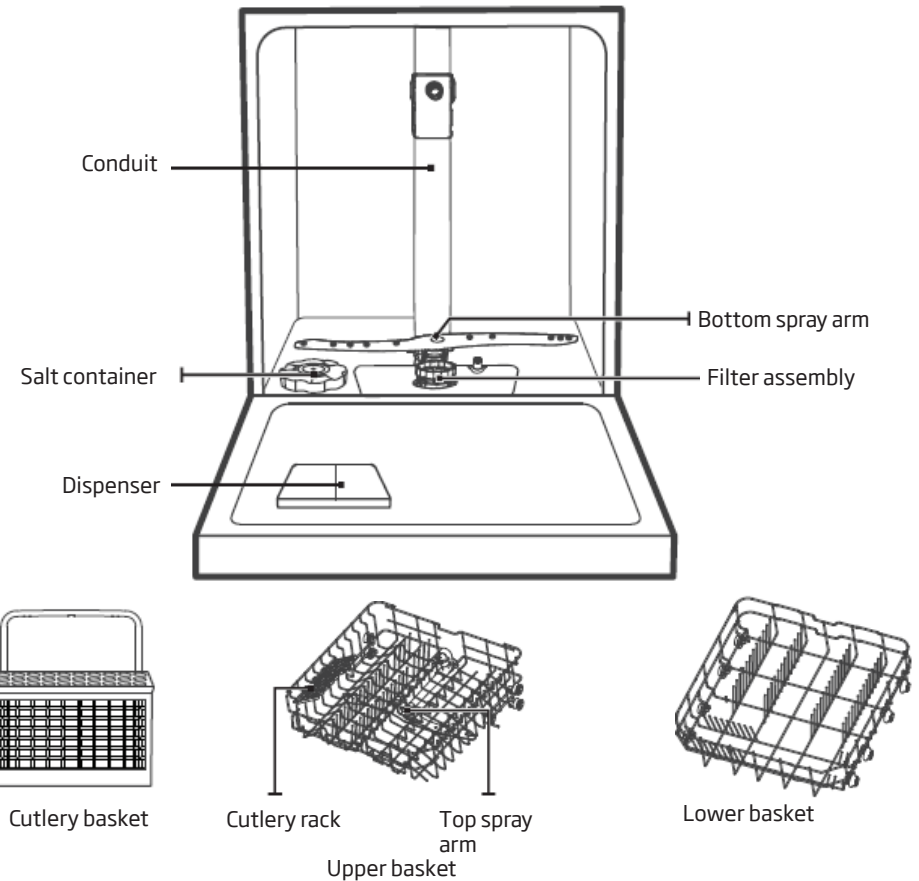

**NOTE:** Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: GSP 542 010 W / GSP 542 010 SI

| ITEM | Programme name | The default temperature [°C] | Type of soil                                                                          | Soil level  | Amount of detergent   |               | Type of cycle |            |            |            |     | Duration [min.] * | Power consumption [kWh] * | Water consumption [litres] * |
|------|----------------|------------------------------|---------------------------------------------------------------------------------------|-------------|-----------------------|---------------|---------------|------------|------------|------------|-----|-------------------|---------------------------|------------------------------|
|      |                |                              |                                                                                       |             |                       |               |               |            |            |            |     |                   |                           |                              |
| 1    | Intensive      | 60°                          | Heavily soiled dishes with dried food residue                                         | Normal soil | 5g/25g (1 or 2 items) | Pre-wash 50°C | Wash 60°C     | Rinse      | Rinse      | Rinse 70°C | Dry | 175               | 1.6                       | 17.5                         |
| 2    | Normal         | 55°                          | For normally soiled crockery, such as pots, plates, glasses and lightly soiled pans.a | Normal soil | 5g/25g (1 or 2 items) | Pre-wash 45°C | Wash 55°C     | Rinse      | Rinse 65°C | Dry        |     | 185               | 1.3                       | 13.5                         |
| 3    | **ECO          | 45°                          | Lightly soiled glass-ware and porcelain                                               | Light soil  | 5g/25g (1 or 2 items) | Pre-wash      | Wash 45°C     | Rinse 65°C | Dry        |            |     | 225               | 0.9                       | 11                           |
| 4    | 90 min         | 65°                          | For normally soiled loads that need quick wash.                                       | Light soil  | 30g (1 tablet)        | Wash 65°C     | Rinse         | Rinse 65°C | Dry        |            |     | 90                | 1.35                      | 12.5                         |
| 5    | Glass          | 40°                          | For lightly soiled crockery and glass.                                                | Light soil  | 5g/25g (1 item)       | Pre-wash      | Wash 45°C     | Rinse 65°C | Dry        |            |     | 130               | 0.9                       | 13                           |
| 6    | Rapid          | 40°                          | A short program for lightly dirty dishes that do not require drying                   | Light soil  | 20g                   | Wash 45°C     | Rinse 50°C    | Rinse 55°C |            |            |     | 30                | 0.75                      | 11                           |
|      |                |                              |                                                                                       |             |                       |               |               |            |            |            |     |                   |                           |                              |

\*\* Standard programme This is a reference program for research institutes. Tests according to EN 50242. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

\* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.