


# OPERATING INSTRUCTIONS EN

IO-WMS-1960  
(01.2022/1)

**WA 14789**

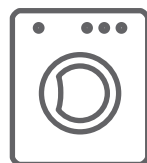

ONLY USE THE APPLIANCE WHEN YOU HAVE  
READ AND UNDERSTAND THE OPERATING  
INSTRUCTIONS

**WASHING MACHINES**



# CONTENTS

ECOLOGY IN PRACTICE	3
BASIC INFORMATION	7
SAFETY AND CLOTHING CARE LABELS	8
INSTALL THE APPLIANCE	19
PRODUCT DESCRIPTION	22
TROUBLESHOOTING	29
PRACTICAL TIPS ON WASHING	32

## ECOLOGY IN PRACTICE


For many years, Amica has consistently pursued pro-ecological policy. Concern for the environment is as important for us as the use of modern technology.

The development of technology has enabled our factories to become more environmentally friendly – we use less and less water, electricity and less waste water and solid waste is generated in the production.

A lot of attention is paid to materials used in production. We strive to use only those that do not contain harmful substances and make recycling and safe disposal possible after use.



# UNPACKING

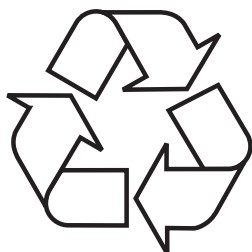

During transportation, protective packaging was used to protect the appliance against any damage. After unpacking, please dispose of all elements of packaging in a way that will not cause damage to the environment.

All materials used for packaging the appliance are environmentally friendly; they are 100% recyclable and are marked with the appropriate symbol.

Important! Packaging materials (bags, polyethylene, polystyrene, etc.) should be kept away from children during unpacking.

# DISPOSAL OF OLD APPLIANCE



In accordance with European Directive 2012/19/EU and local legislation regarding used electrical and electronic goods, this appliance is marked with the symbol of the crossed-out waste container. This marking indicates that the appliance must not be disposed

of together with other household waste after it has been used.

The user is obliged to hand it over to waste collection centre collecting used electrical and electronic goods. The collectors, including local collection points, shops and local authority departments provide recycling schemes.

Proper handling of used electrical and electronic goods helps avoid environmental and health hazards resulting from the presence of dangerous components and the inappropriate storage and processing of such goods.

# Dear customer!

Thank you for choosing an Amica product. For years we have delivered high-quality appliances, so that household chores become a real pleasure. Before being packaged and leaving the manufacturer, the appliance was thoroughly checked with regard to safety and functionality. We also endeavour to make sure that modern technology in Amica products always goes hand in hand with a unique design.

Before using the appliance, please carefully read these Operating Instructions. Follow these instructions to avoid improper use and ensure long and reliable operation of the appliance. Learn the principles of the safe use to avoid accidents.

Store these operating instructions in a safe place to use them for reference whenever needed. These Operating Instructions contain all the necessary information that will make the use of your Amica appliance simple and fun. We also encourage you to find out more about other Amica appliances.

We hope using your new appliance is a pleasure.

**Amica**

# BASIC INFORMATION



This washing machine is intended for domestic use only to wash textiles and clothes designed to be machine washed in a detergent bath.

Before plugging the washing machine into the mains, remove the safety packaging and ensure the machine is level. The manufacturer reserves the right to introduce changes, which do not affect operation of the appliance.

## USAGE

- Carefully read the instructions below before using the appliance.
- Never use the appliance outdoors or anywhere the temperature may fall below freezing.
- The machine should not be operated by children or anyone who has not read the instructions.



Temperatures below 0°C can damage the washing machine! In the event of the machine being stored or transported in sub-zero temperatures, it should be left to acclimatise in a temperature above 0°C for 8 hours before being used.

## MANUFACTURER'S DECLARATION

The manufacturer hereby declares that this product meets the requirements of the following European directives:

- Low Voltage Directive, **2014/35/EU**,
- Electromagnetic Compatibility (EMC) Directive **2014/30/EE**,
- Eco-design Directive **2009/125/EU**,
- RoHS Directive **2011/65/EU**,

and has been marked with the CE symbol and issued with a declaration of compliance made available to market regulators.


The risk of death!	<p>This appliance should not be used by children under 8 years of age, persons with reduced physical or mental capabilities, and persons who do not have sufficient skills to use this type of appliance. Such persons should be offered proper supervision or instructions on safe handling of appliance and related risks. Children must not play with the appliance or perform any maintenance-related activities. Children under 3 years of age must be kept away from the appliance unless continuously supervised.</p> <p>Children could get caught inside the appliance and get into a life-threatening situation.</p>
Risk of suffocation!	If you allow children to play with the packaging/film or parts of the package, they can get entangled or put packaging over their head and risk suffocation. Keep packaging/plastic film or parts of packaging out of reach of children.
Risk of poisoning!	Washing detergents and fabric softeners can cause poisoning if ingested. In the event of accidental ingestion, consult your doctor. Washing detergents and fabric softeners should be stored out of the reach of children.



## SAFETY AND GERMENT CARE LABELS

Risk of burns!	If laundry is washed at high temperature, door glass becomes hot. Prevent children from touching the hot door.
Eye/skin irritation!	Contact with detergents and softeners may cause eye or skin irritation. In case of eye/skin contact, thoroughly rinse eyes/skin to remove fabric detergent/softener. Washing detergents and fabric softeners should be stored out of the reach of children.
Risk of electric shock. Risk of fire/damage to property/appliance!	<p>If the appliance is not correctly installed, it may be dangerous. Make sure that:</p> <ul style="list-style-type: none"><li>Mains voltage corresponds to the voltage indicated on the appliance nameplate (identification plate)</li><li>The current load and required fuse protection are specified on the nameplate.</li></ul> <p>The appliance is connected to AC source only through a properly installed and grounded wall socket in accordance with national standards.</p>

## SAFETY AND GERMENT CARE LABELS

<p>Risk of electric shock. Risk of fire/damage to property/appliance!</p>	<p>The power cord and the grounded wall socket fit together and the grounding system has been properly installed.</p>
	<p>Power cord cross section is sufficient.</p>
	<p>Power plug is always accessible.</p>
	<p>If a miniature circuit-breaker is used, always use a circuit-breaker with the following designation: </p> <p>This symbol is the only way to make sure that all the necessary requirements have been met.</p>
<p>Risk of electric shock. Risk of fire/damage to property/appliance!</p>	<p>If the power cord is modified or damaged, it may result in electric shock, short circuit or fire due to overheating.</p> <p>The power cord must not be kinked, crushed or modified or come in contact with any heat source.</p>

Risk of fire/damage to property/appliance!	The use of extension cords or splitters may result in fire due to overheating or short circuit. Connect the appliance directly to a properly grounded wall socket. Do not use extension cords, splitters or power strips.
Health risk / risk of damage to property/appliance!	The appliance may vibrate or displace while in use, potentially causing injury or property damage. Set the appliance on a clean, level and hard surface using a level spirit.
	If any protruding items are caught by the appliance (e.g. doors) when trying to lift or move it, the item may come off and cause injury. Do not grasp any protruding parts of the appliance to move it.
Risk of injury!	The appliance is very heavy. Lifting may cause injury. Do not lift this appliance by yourself.

Risk of injury!	This appliance has sharp edges that can cause a hand injury. Do not hold the appliance by sharp edges. Only lift the appliance after you put on the gloves.
	If the hoses or electrical cables are not routed properly, you can trip and sustain an injury. Rout hoses and cables so that they do not constitute a tripping hazard.
Important! Damage to property/ appliance	If the water level is too high or too low, the appliance may not work properly, which can cause damage to property/appliance. Make sure that water is supplied under pressure of minimum 100 kPa (1 bar) and not exceeding 1000 kPa (10 bar).
	If the water supplying hoses have been modified or damaged, this can cause damage to property/appliance. The water supply hoses must not be kinked, crushed, modified or cut.
	The use of third-party hoses to connect the appliance to water supply can cause damage to property or the appliance.

<p>Important! Damage to property/ appliance</p>	<p>Use only hoses supplied with the appliance, or the original hoses up designed for the appliance.</p>
	<p>The appliance is secured for transport with transit bolts. If you don't remove transit bolts before using the appliance, the appliance may be damaged. Remove all transit bolts before using the appliance for the first time. Make sure you keep transit bolts in a safe place for future use. If the appliance will be transported, to avoid any damage, you must reinstall the transit bolts.</p>
<p>Risk of explosion/fire hazard!</p>	<p>Laundry washed with detergents that contain solvents and thinners pose a risk of explosion in the drum.</p> <p>Thoroughly rinse laundry with water before washing in the washing machine.</p>

Risk of poisoning!	<p>Cleaning agents containing solvents may give off poisonous vapours.</p> <p>Do not use cleaning agents containing solvents.</p>
Risk of injury!	<p>Do not lean against/sit on open appliance door as this can lead to the appliance tipping over. Do not lean against the open door of the appliance.</p>
	<p>Climbing on the appliance may cause the worktop to break or collapse and lead to an injury Do not climb on the appliance.</p>
	<p>Reaching into the drum while is still rotates could injure your hand. Wait until the drum has come to a standstill.</p>
Risk of scalding!	<p>When washing at high temperature, there is a risk of scalding as a result of contact with hot water and detergent (e.g. when you drain the water into the sink). Do not put your hands in hot water with detergent solution.</p>

<p>Eye/skin irritation!</p>	<p>Fabric detergents and softeners may splash, if the detergent drawer remains open during operation. In case of eye/skin contact, thoroughly rinse eyes/skin to remove fabric detergent/softener. In the event of accidental ingestion, consult your doctor.</p>
<p>Important! Damage to property/ appliance</p>	<p>If the amount of laundry in the washing machine exceeds the maximum load, it may not operate properly or cause damage to property or the appliance. Do not exceed the maximum load capacity of dry laundry. Do not exceed the maximum load capacity for individual wash programmes.</p>
	<p>Adding too much detergent or fabric softener may cause damage to property or the appliance. Use fabric detergent/softener according to the manufacturer's instructions.</p>

The risk of death!!	The appliance is powered by electricity. Touching live elements poses a risk of electric shock. Therefore, remember:
	Turn off the appliance: Unplug the appliance from the wall outlet.
	We never grab the plug with wet hands.
	When pulling the plug, always hold the plug, not the power cord, because this can damage the power cord.
	Do not make any technical modifications to the appliance or its components.
	Any repairs or other work on the appliance must only be performed by our service facility or by an electrician. The same applies to replacing the power cord (if necessary).
	You can order a spare power cord in our service centres.



## SAFETY AND GERMENT CARE LABELS

Risk of poisoning!	<p>Cleaning agents containing solvents may give off poisonous vapours.</p> <p>Do not use cleaning agents containing solvents.</p>
Risk of electric shock / damage to property / appliance!	<p>If water penetrates into the appliance, it may cause a short circuit.</p> <p>Never use pressure washer or steam cleaner to clean the appliance.</p>
Health risk / risk of damage to property/appliance!	<p>The use of third-party spare parts and accessories is dangerous and may cause injury, damage to property or appliance. For safety reasons, use original spare parts only.</p>
Important! Damage to property/ appliance	<p>Fabric cleaners, impregnating agents, stain removers, pre-wash agents, etc. may damage the appliance outer surface.</p> <p>Therefore, remember:</p>




















## SAFETY AND GERMENT CARE LABELS

Important!  
Damage to property/appliance

Make sure there is no contact  
with the appliance surface.

Clean the appliance with a damp  
cloth only.

### UNDERSTANDING THE SYMBOLS ON CLOTHES LABELS

Washing				
	boil at 90°C	normal wash at 60°C	normal wash at 40°C	Do NOT wash!
				
	delicate		handwash	
Chemical cleaning				
	all solvents	all except TRI	petrol only	NO Dry clean!
Tumble dryer				
	normal	low	high	Do NOT dry!
Ironing				
	110°C	150°C	200°C	Do NOT Iron





# INSTALL THE APPLIANCE

1

## Remove the transit bolts

(keep the bolts for future use, e.g. when moving house).

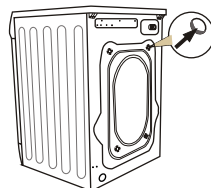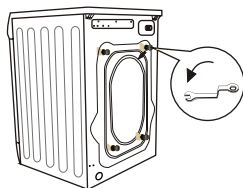

- unscrew the 4 transit bolts with a spanner;
- remove the rubber and plastic transport brackets from the sockets along with the washers and bolts.

- stop up the holes with the stoppers enclosed in the accessories bag.





Caution: the transit bolts **MUST** be removed before the washing machine is used!

2

## Position and level the washing machine


- place the washing machine on a solid, level surface,
- loosen the plastic washer (2)
- Level the appliance by adjusting the legs (1)
- lock with washers (2)

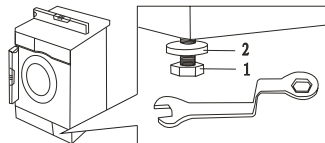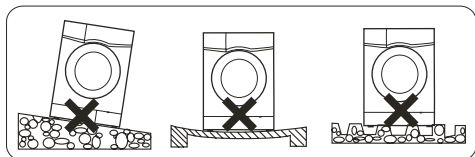

After positioning and levelling the appliance, check that it is stable by pressing down each corner and ensuring it does not move!

## Connect the water supply

- Use only the new hoses supplied with the machine. Do not re-use hoses.

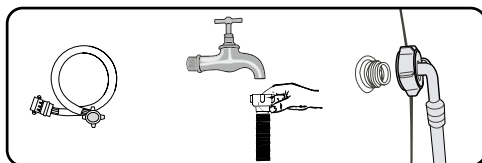

- A supply hose with seals is inside the drum of the machine.  
Water pressure min 0.05 MPa (0.5 bar), max 1 MPa (10 bar).


- 1). after connecting, make sure the hose is not twisted
- 2). after connecting the hose and the valve, check they are sealed tight
- 3). regularly check the condition of the hose.




Supply the machine with cold water only.

## Water drain


- The drain hose is at the back of the machine. Fix the drain hose so that it does not move while the washing machine is in operation. If necessary, use the elbow (1).

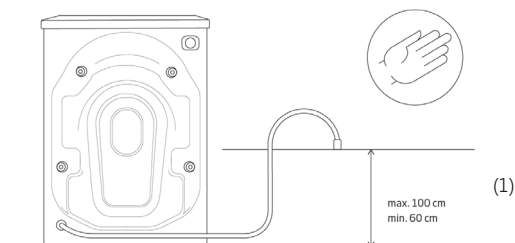


### Connection on the left

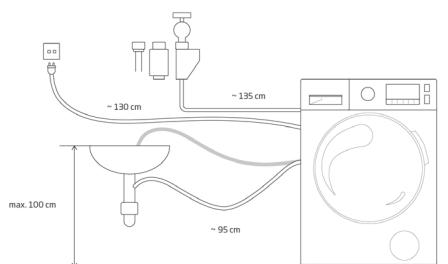

### Connection on the right

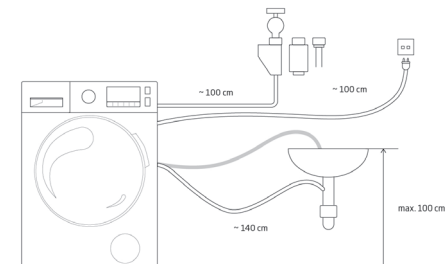

## Connect to power supply

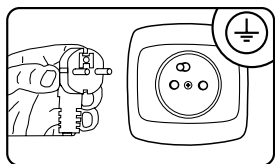


- Electrical wall outlet where the appliance is connects must be in a visible and accessible place,
- Only plug the appliance into a properly installed socket with an earthing pin,
- Do not use an extension cord to connect the appliance,
- in the event of the power cord being damaged, it must be replaced by an authorised service technician,
- the electrical system to which the appliance is to be connected must be protected with a 10 A fuse.

## Prepare to wash:


- Small items such as coins, paper clips, needles, etc., may damage the laundry and the washing machine, you should therefore follow a few important recommendations:
  - 1). Empty pockets
  - 2). Remove all metal items
  - 3.) Delicate items such as bras or stockings should be washed in protective mesh laundry bag
  - 4). Close zippers and fasten buttons
  - 5). Removing foreign objects from the appliance (e.g. underwire, wires)

# FEATURES AND COMPONENTS

## DESCRIPTION OF THE APPLIANCE

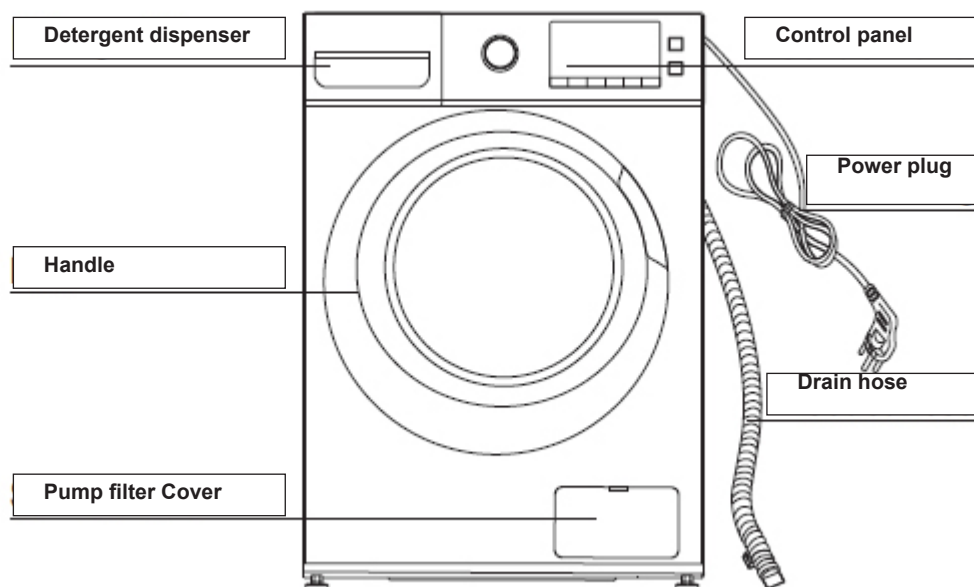

### ■ Accessories:

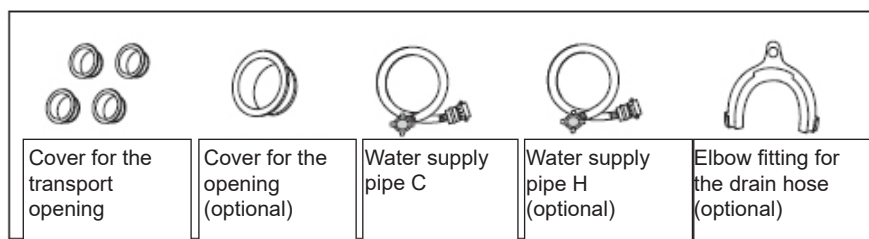


1. Installation of the washing machine

2. Open the door and put in the laundry.

3. Measure off the detergent

4. Close the door

5. Put down (hang up) the drain hose.

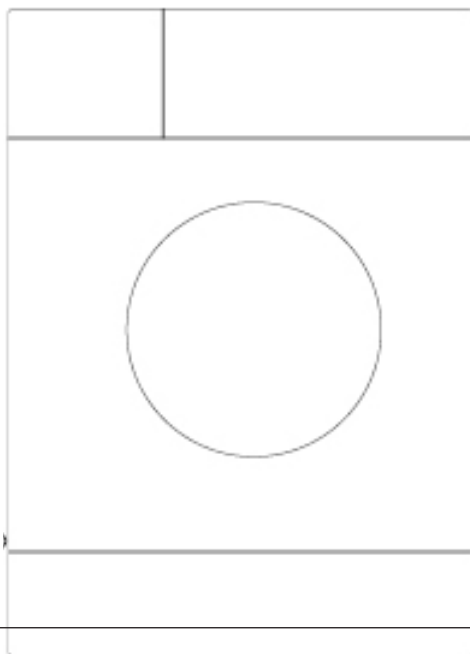

10. Push the Start/Pause button



9. Select the programme.

8. Push the On/Off button

7. Connect to power supply

6. Open the water tap

## DISPLAY AND CONTROL PANEL

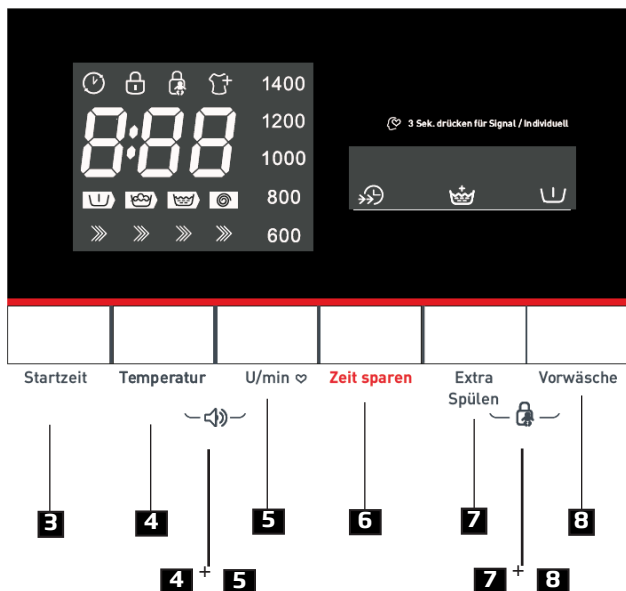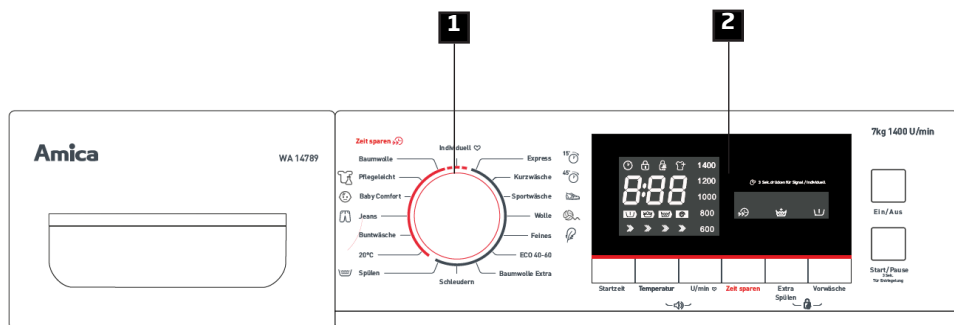












1. Programme selector dial
2. Display
3. **Delay Start** button
4. **Temperature selector** button
5. **Spin Speed** button
6. **Rapid Wash** button
7. **Extra Rinse** additional function button
8. **Pre-wash** additional function button
- 4+5. Acoustic Signal On/Off
- 7+8. **Child Lock**




## 1. Programme selector dial

Choose the appropriate wash programme as required, depending on the degree of soil, and type and amount of laundry loaded, which ensures better results and more effective washing. Once the cleaning programme is started, turning the programme selector knob to another position is indicated by an acoustic signal however it does not change the previously selected programme.

## 2. Display

During washing machine operation, the display shows the approximate time remaining to the end of the wash cycle and the set spin speed. The display also shows symbols indicating the washing machine door locked , spin , programme phase    Child Lock , acoustic signal activation , time remaining until the end of washing cycle  and additional functions selected   

The displayed time is an estimate and may differ from actual wash cycle time, depending on temperature, water pressure, load size, quantity of washing powder used etc. The time is automatically updated during wash cycle. Displaying the same time for an extended period or abrupt changes are normal.

When Delay Start is selected the display also shows the time until the start of the wash cycle and the  symbol.

When adjusting the Spin Speed the display shows the following values:

- 600 - 800 - 1000 - 1200 - 1400.

## 3. Delay Start button

Press this button to set the delay time for starting washing. The setting range available is from 1-24 hours. Press the button to set the time after which washing is to commence.

**NOTE:** If there is a power outage during Delay Time, countdown will resume immediately after the power is restored.

## 4. Temperature selector button

This button allows the washing temperature to be set in different programmes. Press this button to display water temperature settings available for a given programme or an option for washing in cold water (no heating). Depending on the program selected, the display shows the following setting options: - - °C (cold water) - 20°C - 30°C - 40°C - 60°C - 90°C.

## 5. Spin speed selector button

Press this button to set the spin speed when water is being pumped out of the washing machine. Press the button to change the setting. Depending on the programme selected, the display shows the following values: 0 (no spinning)

- 600 - 800 - 1000 - 1200 - 1400.

## DISPLAY AND CONTROL PANEL

### 6. Rapid Wash additional function button

The Rapid Wash function reduces the total wash time saving money while reducing energy consumption and water consumption.

The function is recommended when washing lightly soiled laundry.

**NOTE 1:** The Rapid Wash function is not available for all programmes (see Table of wash programmes).


### 7. Extra Rinse additional function button

The function is especially useful when washing underwear and also clothes for people with sensitive skin. Select this option to add an extra rinse to wash cycle.

### 8. Pre-wash additional function button

The **Pre-wash** function extends the wash cycle by approximately 20 minutes. The laundry is pre-washed before the main wash cycle begins. Use the **Pre-wash** to achieve excellent washing results without the need to soak the laundry. Pre-wash is recommended when washing heavily soiled laundry. Pre-wash is carried out at a temperature of 30°C.

**Important!** The Pre-wash function is not available for all programmes (see Table of wash programmes).

**Important!** Pour suitable detergent to detergent drawer marked with "" symbol before the Pre-wash function is activated.

### START/PAUSE button

Press **Start/Pause** to start or pause a programme.

During the washing cycle the corresponding programme phase symbol is flashing. In **Pause** mode, the symbols do not flash and are lit up continuously. The **Pause** mode can be used to soak the laundry.

Once the selected programme has started wait for about 10 minutes and then press the **Start/Pause** button. When the laundry is soaked as required, press the **Start/Pause** button again to resume the programme. Soaking will improve washing results for heavily soiled laundry.

#### 4+5. Acoustic Signal On/Off

The Acoustic Signal On/Off is activated by simultaneously pressing and holding: **Temperature selector** and **Spin Speed** buttons for about 3 seconds.


#### 7+8. Child Lock

This function locks function buttons to prevent settings being changed or operation interrupted by children. Pres and hold **Extra Rinse** and **Pre-wash** button for 3 seconds to activate the Child Lock during a washing cycle. To release Child Lock during the cycle, hold the same buttons down once more for around 3 seconds.

**Important!** If the Child Lock function is activated, the display will show the  symbol.

**Important!** When you turn off or unplug the washing machine or the washing cycle ends, the Child Lock function will not deactivate.

#### Select a favourite programme

To set the **Favourite** programme turn the knob on any programme and set temperature, spin speed and additional functions. Then, press and hold down the **Spin Speed**  for about 3 seconds to confirm the **Favourite** programme setting. The default is the program Cotton.

### SPECIAL PROGRAMMES

1

#### Baby Comfort

- Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.

2

#### Express 15'

- Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry. Use this programme to refresh clothes. Includes all three wash stages:  
1). Main wash    2). Rinse    3). Spinning

3

#### ECO 40-60

- The "eco 40-60" program is designed for washing normally soiled cotton fabrics considered suitable for washing at 40 °C or 60 °C, together in the same cycle.

4

#### 20°C

- Washing brightly colored clothes, it can protect the colors better.

## USING THE APPLIANCE

### I. Select Programme

1. Set the programme selector knob to the desired programme (see the table further on).
2. Change temperature, spin speed or activate available additional functions to modify the programme to your individual needs.
3. Press the Start/ Pause button

### II. Set Delay Start

The delayed start function may be used when, for example, taking advantage of discounted electricity tariffs.

#### Procedure:

1. Close the appliance door.
2. Set the programme selector knob to the desired programme (see the table further on).
3. Select additional functions or wash cycle parameters as required.
4. Press the Delay Start button.
5. Select time ranging from 1 to 24 hours. The display will show the setting from 1h to 24h.
6. Press the [Start/ Pause] button. The appliance will be set in delay mode. Washing will commence immediately after the delay time has elapsed.

**Note:** If you set delay start, the display will show the time remaining to start the washing program.

### III. End of the wash cycle

1. End of the wash cycle is indicated by acoustic signal (if active). The display shows 0:00 and the door lock indicator light goes out.
2. Turn off the water valve
3. Switch the machine off
4. Unplug the appliance from the mains.
5. Open the door and remove laundry.

### IV. Cancel or modify programme

Press the On/Off button to interrupt the programme. Then select the desired wash program again and press the Start/Pause button.

# TROUBLESHOOTING

Problem	Probable cause/Solution
The washing machine is not working	<ul style="list-style-type: none"> <li>Open the water supply tap.</li> <li>- clean the mesh filter on the supply hose</li> <li>- close the door</li> <li>- press the Start/ Pause button</li> </ul>
Water Leakage	<ul style="list-style-type: none"> <li>- Properly connect the water supply hose.</li> </ul>
The load in the appliance has not been spun	<ul style="list-style-type: none"> <li>- Replace the load evenly in the drum, clean the pump filter.</li> </ul>
Unpleasant smell in the drum	<ul style="list-style-type: none"> <li>- Run the drum autoclean programme</li> </ul>
No water in the drum	<ul style="list-style-type: none"> <li>- Open the water supply tap.</li> </ul>
There is water left in the fabric softener container.	<ul style="list-style-type: none"> <li>- Press down on the plastic tab located in the central compartment of the detergent tank.</li> </ul>
Washing not properly rinsed	<ul style="list-style-type: none"> <li>- Add correct amount of detergent, depending on the soiling level and water hardness (see the instructions on the detergent packaging).</li> </ul>
The appliance does not fill with water	<ul style="list-style-type: none"> <li>- Open the water valve,</li> <li>- check programme settings,</li> <li>- check water pressure,</li> <li>- reconnect the water supply hose.</li> <li>- close the door</li> <li>- check that water intake hose is not bent or blocked</li> </ul>
Simultaneous water intake and draining.	<ul style="list-style-type: none"> <li>Check that the end of the drain hose is higher than the level of the water in the appliance (the hose should be at a height of 0-100 cm).</li> </ul>
Water does not drain properly	<ul style="list-style-type: none"> <li>- check the pump filter,</li> <li>- check the drain hose,</li> <li>- check the placement of the drain hose – it should be at a height of 0.6 to 1 m from the floor.</li> </ul>

# THE FAULT INDICATOR LIGHTS

The washing machine features an alert system that indicates ERROR CODES on the display to help locate minor operating faults and identify their cause. The ERROR CODES help locate and determine the cause.

Detected errors are indicated as shown in the following table:

Display indication	Reason	Explanation
E10	Low pressure, no water in the drum	Open the water valve, check the water inlet hose and filter, check water pressure
E12	Overflow	Restart the appliance
E21	Water does not drain properly	Check water drain pump and filter.
E30	Washing machine door not lock when you close the	Close the washing machine door and make sure that laundry is not jammed in the door.
Others		Try to restart or contact the SERVICE CENTRE.



While signaling an error washing machine also beeps (if active).

## MAINTENANCE AND CLEANING



Never clean the appliance body or plastic parts using solvents or harsh, abrasive detergents (e.g. washing powders or creams)! Use mild liquid detergents and soft cloths only. Do not use sponges.

1

### Clean the pump filter

- Clean the pump filter every 20 washes or so. Neglecting to clean the filter may result in problems with draining water from the appliance!



- Unplug the appliance from the mains,
- Turn off the water valve,
- Open the filter cover by hand or using a flat-head screwdriver.
- Unscrew the filter.
- Remove and clean the filter.

2

### Clean the water supply valve

- Replace the filter following the procedure in reverse order.



- 1). unscrew on the water supply hose,
- 2). use forceps to grasp the filter mesh pin,
- 3). remove and clean the filter, preferably using a brush.

3

### Clean the detergent drawer

- Should be cleaned at least once a month.
- 1). pull out the detergent drawer.  
Press down the tab and completely remove the drawer.
  - 2). rinse under running water, clean with a brush or a piece of fabric,
  - 3). replace the drawer.



Note!

Do not use alcohol, solvents or chemical products to clean the machine.

# PRACTICAL TIPS ON WASHING

## DETERGENTS AND LAUNDRY ADDITIVES




It is recommended to use a general-purpose laundry detergent powder or liquid for the full range of temperatures according to the manufacturer's instructions on the detergent packaging.

1

### Detergents

- Pour the detergent into the drawer compartment marked **II**
- Pour the pre-wash detergent into the drawer compartment marked **I**

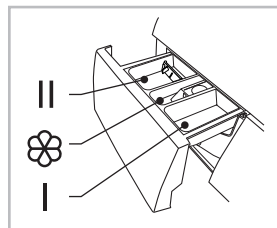

2

### Fabric softeners added to the rinse

- Pour the fabric softener into the drawer compartment marked
- Do not exceed the maximum level marked on the drawer compartment. This detergent will be used for the final rinse.



For washing whites it is recommended to use the washing powder. Liquid detergents do not contain bleach. Do not use rinse aid with white laundry, as this may cause yellowing of laundry.



## FIRST WASH

- Before washing for the first time, put the appliance through one high temperature cycle without a load, according to the following procedure:
  - 1). connect the washing machine to the power supply,
  - 2). open the water valve,
  - 3). set the programme selector dial to washing at high temperature, add a suitable detergent and press Start/Pause.

## SOIL

1

### Stubborn stains

- Before washing underwear, apply an additional stain remover according to the instructions for use.

2

### Heavy soil

- in order to achieve a better result, wash less laundry,
- add more detergent.
- Rinse the washing machine after washing heavily soiled garments (e.g. work clothes) or clothing that loses fibres. To do this, run the wash cycle at 60°C, for example Cotton or Synthetics without any load.

3

### Light soil

- See Conservation.

## CONSERVATION

### Reduce energy and water consumption

- Garments which are only lightly soiled should be washed on the Rapid Wash setting.
- For most programmes, the washing machine detects load.  
For partial load, when using the Cotton programme, the appliance will reduce water and energy consumption and shorten the wash cycle.
- The most energy and water efficient wash programmes are generally those that run at lower temperature and for a long time.
- Loading the washing machine to the full capacity indicated by the manufacturer for the respective wash programmes will save energy and water.

## WATER HARDNESS

- Hard water causes scale deposition. Information about water hardness is available from the nearest water works. We recommend that you use water softener for each washing.

## POWER OUTAGE (PROGRAMME MEMORY)

- Power outage or unplugging the appliance does not cancel the set programme. The programme is memorised and resumes when power is restored. Do not open the appliance doors during a power outage.

## LOAD

- Maximum drum capacity 7 kg.
- Load the laundry into the drum according to the following instructions:
  - 1). cotton, denim, children's clothes – max full drum (do not force clothes into the drum as this will reduce the quality of the wash),
  - 2). Synthetics – max ½ of the drum,
  - 3). wool, silk, delicate fabrics – of the drum.



Do not overload the appliance. Overloading the appliance may damage the clothes being washed! If you overload the appliance the OVL is shown appears on the display – remove excess laundry from the drum and restart the washing machine. The maximum load amounts depending on the programme are given in table of programmes.

## LOAD DISTRIBUTION CONTROL

- The appliance features load distribution control system. Before spinning, this checks the distribution of clothes inside the drum. In the event that too great an imbalance is detected, the system makes several attempts to rearrange the clothes inside the appliance. Sometimes these attempts to distribute the load are not successful. Problems may be caused by terrycloth robes washed together with other types of laundry, such as bed sheets that formed a bundle around other items of laundry.
- The system may then respond in two ways:
  - 1). accept the uneven distribution of garments and reduce spin speed,
  - 2). cancel the spinning.

In both cases, after washing, open the door of the washing machine, manually wash the laundry, close the door and select any program.

## DOOR LOCK

- The washing machine is equipped with a lock which prevents the door from being opened during wash cycle. Once a wash cycle is complete, the door lock is automatically released.



If there is water in the drum or it is still hot you will not be able to open the door. Opening the door is not possible during some wash cycle stages.

## DELICATE FABRICS

1

### Select Programme

- Select the appropriate wash programme: Synthetics, Wool, Delicates.

2

### Load

- Avoid overloading the washing machine – the maximum load is 2.5 kg for delicate fabrics, see "Loading."

## ADD DETERGENT

1

### Not enough detergent

- the laundry turns grey, lumps of fat form, lime scale is deposited.

2

### Too much detergent

- A lot of foam, ineffective washing, detergent incompletely rinsed from fabrics.

For more information about the product, please refer to the EU EPREL Product Database at <https://eprel.ec.europa.eu>. For more information, please use your mobile device to scan the QR code on the energy label or enter the product model listed on the energy label in the EPREL search engine <https://eprel.ec.europa.eu/>

# WARRANTY AND AFTER SALES SERVICE

## Warranty

Warranty service as stated on the warranty card. The manufacturer shall not be held liable for any damage caused by improper use of the product.

## Service

- The manufacturer recommends that all repairs and adjustments be carried out by the Factory Service Technician or the Manufacturer's Authorized Service Point. For safety reasons, repairs should be referred to professionals.
- Repairs carried out by unqualified persons may seriously endanger the appliance user.
- Pursuant to Commission Regulation (EU) 2019/2023, the minimum availability period for spare parts necessary to repair the appliance is 7 or 10 years depending on the type and purpose of the spare part.
- The list of spare parts and the ordering procedure are available on the websites of the manufacturer, importer or an authorized representative.
- The minimum warranty period for the appliance offered by the manufacturer, importer or authorized representative is given in the warranty card.
- The warranty shall be void if you make any independent adaptations or alterations, tamper with seals or other appliance safety devices or its parts or interfere with the appliance contrary to operating instructions.

## In the event of appliance malfunction, request assistance or repair.

If your appliance needs repair, please contact the service centre. Please see warranty card for address and contact details of our service centre. Before contacting us, please have ready the appliance serial number, which can be found on the identification sticker: For your convenience, please write it down below:

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--





**AMICA S.A.**

UL. MICKIEWICZA 52  
64-510 WRONKI

**TEL.** 67 25 46 100

**FAX** 67 25 40 320

**WWW.AMICA.PL**