

Dear Customer,

 
This Quick Start Guide is enclosed with detailed washing machine operating instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging the washing machine into the mains, remove the safety packaging and ensure the machine is level. Do not start the washing machine before it is properly set up.

Only wash delicate fabrics, synthetics, wool using designated programs. Such fabrics should only be washed in the maximum load sizes recommended (see page 2).

The correct washing machine operation extends its lifetime so make sure the drum seal is dry (leave the door ajar after washing). Do not clean the washing machine with harsh or abrasive detergents.

1 Preparing to wash



- Empty pockets
- Close all zips and button up duvet covers.
- Wash delicate and small items in a protective mesh laundry bag.
- Open the door of the washing machine by gripping the door and the door handle on the inside of the door.
- Insert the sorted clothes into the washing machine:
 - Cotton — max full drum.
 - Synthetics — max ½ of the drum.
 - Silk, wool — max 1/3 of the drum.
- Close the door, press firmly against the seal.

2 Add detergent

- Open the detergent drawer. Pull the handle.
- Pour the recommended dose of washing detergent into the appropriate compartment of the detergent drawer.
- Add fabric conditioner to the appropriate compartment if required.
 - II MAIN WASH detergent.
 - ☼ Fabric softener or other special care liquids.
 - I PREWASH detergent.

3 Program selections

- Set the programme selector knob to the desired programme.
- Customize the programme to your needs — you can change the temperature, spin speed, or enable additional features.
- Select additional functions. The additional functions are described on the control panel and in the "Table of Wash Programmes" (see page 2).

4 Select START

- Close the appliance door.
- Set the programme selector dial to the desired programme (see page 2).
- Select additional functions or wash cycle parameters as required – according to your needs.
- Then press the START/ PAUSE button

5 End of the wash

- The door lock and the [Start / Pause] lights flash with the buzzer beeping or two small points flash on the digital screen.
- Turn off the water valve.
- Turn off the main switch.
- Unplug the appliance from the mains.
- Open the door and remove laundry.



1. Detergent drawer
2. Drum
3. Programme selector dial
4. Control Panel
5. Door handle
6. Pump filter cover

1

 
I Pre wash detergent
II Main wash detergent
☼ Softener



Liquid detergent




 
 
 
 
 
 


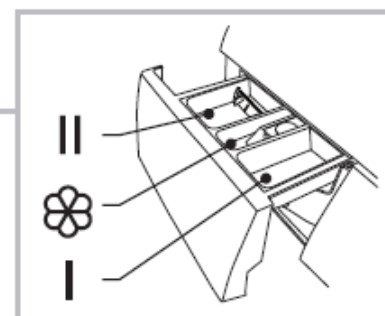

 
 
 






 
 
 




 
 
 
 



 
 


 
 


 
 


 
 
 
 


Powder detergent



Pull out the dispenser

TABLE OF WASH PROGRAMMES: WA462020

Programme name	The default temperature [°C]	Max. Spin speed [rpm.]	Max. load [kg]	Additional functions available			Detergent drawer			Time [h:min]	Energy consumption [Wh]	Water consumption [l]	Number of rinses	Type of laundry
				Prewash	Extra rinse	Delay end	 Prewash	 Main wash	 Fabric softener					
Synthetics	--	1000	3,0	-	option	-				2:20	324	40	2	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
Synthetics	40°	1000	3,0	-	option	-				2:20	624	40	2	
Cotton	-	1000	6,0	option	option	-				1:00	102	40	2	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Cotton	20°	1000	6,0	option	option	-				1:01	162	40	2	
Cotton	30°	1000	6,0	option	option	-				2:40	667	58	2	
Cotton	40°	800	6,0	option	option	-				2:40	847	58	2	
Cotton	60°	800	6,0	option	option	-				2:45	1207	58	2	
Cotton	90°	800	6,0	option	option	-				2:50	1717	58	2	
Eco 40-60	60°	1000	6,0	-	-	-	X			3:16	59	50	2	The “eco 40-60” program is used to wash normally soiled cotton fabrics together, which can be washed at 40 °C or 60 °C on the same cycle.
Cotton Intensive	40°	1000	6,0	-	-	-				4:04	760	48	2	
Cotton Intensive	60°	1000	6,0	-	-	-				4:08	1120	48	2	To increase the washing effects, washing time is increased.
Autoclean	90°	400	-	-	-	-	X	X	X	1:18	930	8	1	It applies 90 °C high temperature sterilization to make the clothes washing more green. When this procedure is performed, the clothes of other washing cannot be added. When proper amount of chlorine bleaching agent is put in the barrel cleaning effect will be better. The customer can use this programme regularly according to the need.
Spin only	-	1000	6,0	-	-	-	X	X	X	0:12	30	-	-	Extra spin.
Drain only	-	-	-	-	-	-	X	X	X	0:01	10	-	-	Drain off the water.
Rinse only	-	1000	6,0	-	option	-	X	X		0:20	59	22	1	Extra rinse with spin.
Delicates 30°C	30°	600	2,5	-	option	-	X			0:50	262	37	2	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics.
Delicates	-	600	2,5	-	option	-	X			0:48	142	37	2	
Delay end 9 h	40°	1000	6,0	-	-	-	X			0:59	500	40	2	The function can be set with this programme, the total time including washing time and delaying time is 3h,6h or 9h.
Delay end 6 h	40°	1000	6,0	-	-	-	X			0:59	500	40	2	
Delay end 3 h	40°	1000	6,0	-	-	-	X			0:59	500	40	2	
Fast 45’	40°	800	2,0	-	-	-	X			0:45	401	34	2	It is suitable for washing few and not very dirty clothes quickly.
Quick 30’	30°	800	2,0	-	-	-	X			0:30	311	34	2	
Express 15’	-	800	2,0	-	-	-	X			0:15	43	34	2	

* The “eco 40-60” program is used to wash normally soiled cotton fabrics together, which can be washed at 40 °C or 60 °C on the same cycle.


** The most energy and water efficient wash programmes are generally those that run at lower temperature and for a long time.


*** Loading the washing machine to the full capacity indicated by the manufacturer for the respective wash programmes will save energy and water.


NOTE: Real water temperature may differ from the declared wash cycle temperature.

NOTE: Above mentioned time is an estimate and may differ from actual wash cycle time, depending on temperature, water pressure, load size, etc.

The time is automatically updated during wash cycle. Displaying the same time for an extended period or abrupt changes are normal.

 Use detergent or fabric softener if necessary,

 Detergent required, without which washing will be ineffective.

 Do not use detergent or fabric softener