

! Attention: Please read the operating manual prior to operating the machine for the first time.



- 1 On/Off button
- 2 Rinse aid level indicator light
- 3 Salt level indicator light
- 4 LED progress indicator lights
- 5 Half Load function
- 6 Start/Cancel button
- 7 Programme selection button
- 8 Programme indicator lights

How to use your dishwasher:

- Open the water tap.
- Plug to the mains.
- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Fill enough detergent into the detergent dispenser and close the door.
- Use the on / off button to turn the machine on.
- Check the salt and rinse aid level indicator lights. If necessary, refill salt and/or rinse aid.
- Use the programme selection button to choose your washing programme.
- Start the programme with the Start/Pause button:

Attention

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the programme will continue.

- Use the on / off button to turn the machine off again. When the progress indicator light "programme end" lights up, the programme is complete.
- Close the water tap. Pull out the plug.

Programme Data and Average Consumption Values Table

Programme number	1	2	3	4	5
Programme name	Eco ***	Intensive	Middle Wash	Quick&Dry	Mini 30
Cleaning temperature	50 °C	70 °C	65 °C	60 °C	35 °C
Degree of Soiling	Suitable for washing dishes with normal amount of soil. It is the most efficient program in terms of combined power and water consumption. This is used for assessing the compliance with EU's eco-design directive.	Suitable for heavily soiled dishes, pots and pans.	Daily washing programme for normally soiled dishes.	Daily washing programme for normally soiled dishes in the fastest way.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.
	Medium	High	Medium	Medium	Low
Prewash	+	+	+	-	-
Wash	+	+	+	+	+
Dry	+	+	+	+	-
Duration (min)	205	120	120	58	30
Water (l)	12,9	17,6	16,2	11,8	11,8
Energy (kWh)	0,92* / 0,937**	1,65	1,38	1,20	0,80

* : EN 60436:2016 ** : EN 60436:2020 The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.

*** Reference programme for testing institutes. The tests in accordance with EN 50242/60436 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme. The values given for programmes other than Eco 50°C programme are indicative only.

Loading Capacity: 13



- 1 On/Off button
- 2 Rinse aid level indicator light
- 3 Salt level indicator light
- 4 LED progress indicator lights
- 5 Half Load function
- 6 Start/Cancel button
- 7 Programme selection button
- 8 Programme indicator lights

On/off button

You turn your dishwasher on / off with this button. When turning on, the indicator light for the last used programme will light up.

Salt level indicator light

When this indicator light comes on, you must refill special salt (If applicable).

Rinse aid level indicator light

If this indicator light comes on, you have to refill rinse aid (If applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

Program selection button

Use the programme selection button to select the desired programme. The corresponding programme light lights up.

Start/cancel button

You use this button to start the selected program; the light on the button lights up.
Stop the program with the start/cancel button if you would like to open the door once the dishwasher's washing program is running.

- Wash
- Rinse
- Dry
- End

LED progress indicator lights

The program sequence throughout the washing process can be monitored from the progress indicator lights on the control panel.

! Warning

Following the washing stage, in order to drain and remove water from inside the machine completely, the machine will pause for approximately 35 minutes. Do not worry this is not a fault. Then End progress indicator light will come on.

! Warning

Do not switch the machine off before End light comes on.

How to cancel the washing program

Press start/cancel button for 3 seconds. The indicator light will start flashing. The machine will drain the water inside the machine for 45 seconds. The programme is cancelled when start/stop indicator light goes off. Then, you can choose and start a new programme.

! Important:

Depending on the stage of the program you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

Half Load function

It is used to operate the machine without loading it completely.

1. Load your dishes in the machine as you like.
 2. Turn the machine on with On/Off key.
 3. Select the desired programme and press the Half Load key.
- While the function is enabled, the Half Load indicator will become on in the function selection indicator and on the display.
4. Start the programme by pressing Start / Pause / Cancel key.



With the Half Load function you can save both water and power while using the lower and upper baskets of the machine.

Improper Loading Of Dishware

