

Amica

OPERATING INSTRUCTIONS EN

IO-WMS-4124
(07.2025/2)

WTP 472 000



ONLY USE THE APPLIANCE WHEN YOU HAVE
READ AND UNDERSTAND THE OPERATING
INSTRUCTIONS

DRYER

DISPOSAL OF OLD APPLIANCE




In accordance with European Directive 2012/19/EU and Polish law on waste electrical and electronic equipment, this appliance is marked with the crossed-out waste bin symbol. This symbol indicates that the appliance must not be disposed of with household waste after use.

The user is obligated to dispose of this appliance at an authorised collection point for waste electrical and electronic equipment. Local collection points, shops, and local authority departments together provide a recycling scheme.

Properly disposing of old electrical and electronic equipment prevents environmental and health risks caused by hazardous components and improper handling.

UNPACKING

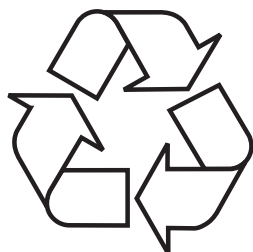

During transportation, protective packaging was used to protect the appliance against any damage. After unpacking, dispose of all packaging materials responsibly to minimise environmental impact.

All materials used for packaging the appliance are 100% recyclable and are marked with the appropriate symbol.

Note! Packaging materials, including bags, polyethylene, and polystyrene, present a choking hazard and should be kept away from children at all times during and following unpacking.

CONTENTS

| | |
|----------------------------------|----|
| BASIC INFORMATION | 5 |
| SAFETY AND GARMENT CARE LABELS | 6 |
| INSTALL THE APPLIANCE | 15 |
| DESCRIPTION OF THE APPLIANCE | 20 |
| MAINTENANCE AND CLEANING | 25 |
| TROUBLESHOOTING | 27 |
| WARRANTY AND AFTER-SALES SERVICE | 29 |

WE DEEPLY CARE ABOUT THE ENVIRONMENT

For many years, Amica has consistently pursued pro-ecological policy. Concern for the environment is as important for us as the use of modern technology.

The development of technology has enabled our factories to become more environmentally friendly – we use less and less water, electricity and less waste water and solid waste is generated during production.

A lot of attention is paid to materials used in production. We strive to use only those that do not contain harmful substances and make recycling and safe disposal possible after use.

Dear customer!

Thank you for choosing an Amica product. For years we have delivered high-quality appliances, so that household chores become a real pleasure.

Before being packaged and leaving the manufacturer, this appliance was thoroughly checked with regard to safety and functionality. We also endeavour to make sure that modern technology in Amica products always goes hand in hand with a unique design.

Before using the appliance, please carefully read these Operating Instructions. Follow these instructions to avoid improper use and ensure long and reliable operation of the appliance. Learn the principles of the safe use to avoid accidents.

Store these operating instructions in a safe place to use them for reference whenever needed. These Operating Instructions contain all the necessary information that will make the use of your Amica appliance simple and fun. We also encourage you to find out more about other Amica appliances.

We hope using your new appliance is a pleasure.

Amica

BASIC INFORMATION



This appliance is intended for household use only for drying textiles and clothing.

Level the appliance before connecting it to a wall socket. The manufacturer reserves the right to make design and specification changes that do not materially affect the appliance's performance.

USE

- Carefully read the instructions below before using the appliance.
- Never use the appliance outdoors or anywhere the temperature may fall below freezing.
- The appliance should not be operated by children or anyone who has not read these operating instructions.



Temperature below 0°C can damage the appliance! In the event of the appliance being stored or transported in sub-zero temperature, it should be left to acclimatise in a temperature above 0°C for 8 hours before being used.

MANUFACTURER'S DECLARATION

The manufacturer hereby declares that this product meets the requirements of the following European directives:

- Low Voltage Directive **2014/35/EU**,
- Electromagnetic Compatibility (EMC) Directive **2014/30/EE**,

and has been marked with the CE symbol and issued with a declaration of compliance made available to market regulators.

| | |
|--|--|
| | <p>This appliance should not be used by children under 8 years of age, persons with reduced physical or mental capabilities, and persons who do not have sufficient skills to use this type of appliance. Such persons should be offered proper supervision or instructions on safe handling of appliance and related risks. Children must not play with the appliance or perform any maintenance-related activities. Children under 3 years of age must be kept away from the appliance unless continuously supervised.</p> |
| | <p>Children could get caught inside the appliance and get into a life-threatening situation.</p> |
| | <p>This product is a Category I electrical appliance that is used exclusively for indoor drying fabrics washed in water. Use safe power supply during the operation!</p> |
| | <p>The power source must be grounded. The grounding cable must be buried underground and must not be connected to the utilities network, such as water pipe or gas pipe. Grounding and neutral wire and must be distinguished and may not be connected together.</p> |

SAFETY AND GARMENT CARE LABELS

| | |
|--|--|
| | Do not exceed the recommended load of laundry. Please observe the specified maximum load size. Use the table of drying programmes in the operating instructions. |
| | Do not dry chemically cleaned clothes in the dryer |
| | Do not dry dirty laundry. |
| | Laundry contaminated with substances such as cooking oil, acetone, alcohol, petrol, kerosene, stain removers, turpentine, wax and wax removers must be washed in warm water with detergent before drying in the dryer. |
| | Do not attempt to dry the foam rubber (latex foam), bathing caps, waterproof textiles, rubber-lined clothing or pillows fitted with rubber pads in your tumble dryer. |
| | Fabric softeners or similar products should be used as specified in the relevant directions for use. |

SAFETY AND GARMENT CARE LABELS

| | |
|--|---|
| | There is no heating during the last part of the drying cycle (cooling), so that the laundry is not damaged and has the right temperature. |
| | Clean the lint filter after each use. |
| | Do not let the lint and fibres accumulate around the dryer. |
| | Ensure adequate ventilation to avoid the ingress of gases into the room from fuel burning appliances or smoke from an open fire. |
| | Air from the appliance must not be discharged to a chimney used for discharging flue gas from combustion appliances that burn gas or other fuels. |

| | |
|--|--|
| | The appliance must not be installed behind a lockable door, a sliding door or a hinged door on the opposite side to the dryer. Full opening the dryer door must not be restricted. |
| | Laundry contaminated with oil may ignite spontaneously, especially in the heat generated in a tumble dryer. |
| | Heating oil causes oxidation reaction. The oxidation produces additional heat. If the heat cannot dissipate, the laundry can become hot enough that ignition occurs. Stacking fabrics soiled with oil can prevent heat dissipation and create a fire hazard. |

SAFETY AND GARMENT CARE LABELS

| | |
|--|--|
| | If you cannot avoid tumble drying fabrics soiled with vegetable oil, cooking oil or dirty hair care products, you must first wash dirty laundry in hot water with detergent. In this way you can reduce, but not eliminate the risk. |
| | Before washing, remove all items such as lighters, matches from pockets. |
| | Under any circumstances do not use the appliance with a damaged power cord! |
| | This appliance is intended for use in locked rooms only. |
| | Carpet, floor lining, etc. must not block the front or rear appliance exhaust vents. |

| | |
|--|---|
| | <p>If the appliance excessively heats up, immediately remove the plug from the wall outlet.</p> |
| | <p>The power cord must comply with IEC Standards and carry the nominal current as specified in the table below. If these requirements are not met, you should immediately adapt your domestic electrical system to ensure the safety of your household.</p> |
| | <p>Do not pull the power cord. Always pull by the power plug.</p> <p>Do not insert or remove the plug from the wall outlet with wet hands.</p> <p>Do not damage the cord or plug.</p> |

| | |
|------------------------|--|
| <p>Risk of injury</p> | <p>Do not install or disassemble the dryer without supervision and before you carefully read the operating instructions.</p> <p>Do not place the dryer on the washing machine, without a special washer dryer stacking kit. To install the dryer on top of a washing machine, you must purchase a suitable washer dryer stacking kit. To avoid any risk your tumble dryer must be installed (the manufacturer's service technician or other suitably qualified person).</p> <p>Do not lean on the open dryer door.</p> <p>Do not place objects such as candles or electric stove on the dryer.</p> |
| <p>Risk of damage.</p> | <p>Do not overload the dryer. Loading the dryer to its maximum capacity will help save energy;</p> <p>Do not use the dryer without the filter base and its cover.</p> <p>Do not dry wet laundry that has not been spun.</p> |













| | |
|--------------------------|---|
| <p>Risk of damage.</p> | <p>Do not expose the dryer to direct sunlight. This appliance is designed for household use only.</p> <p>Do not install dryer in rooms with high humidity.</p> <p>Unplug the appliance from the wall outlet before any cleaning and maintenance. Do not wash the appliance with a jet of water.</p> <p>For safety reasons, repairs should be referred to professionals. Repairs carried out by unqualified persons may seriously endanger the appliance user.</p> |
| <p>Risk of explosion</p> | <p>Do not dry laundry contaminated with flammable substances, such as oil or alcohol, as it can result in explosion.</p> |

UNDERSTANDING THE SYMBOLS ON CLOTHES LABELS

Note!

- Never overload the appliance.
- Do not dry wet clothes dripping water. This may damage the dryer or cause a fire.

Make sure that the clothing is suitable for tumble drying and pay attention to the following symbols:

| | | | |
|---|---|--|--|
| Dry  | Tumble dry, normal  | Do not tumble dry  | Do not dry  |
| Line dry/hang to dry  | Drip dry  | Dry flat  | Dry in the shade  |
| Dry clean  | Do not dry clean  | Dry clean normal cycle with any solvent  | Dry clean normal cycle petroleum solvent only  |




Always pay attention to the symbols on garment labels when choosing a drying programme.

INSTALL THE APPLIANCE

1

Description of the appliance

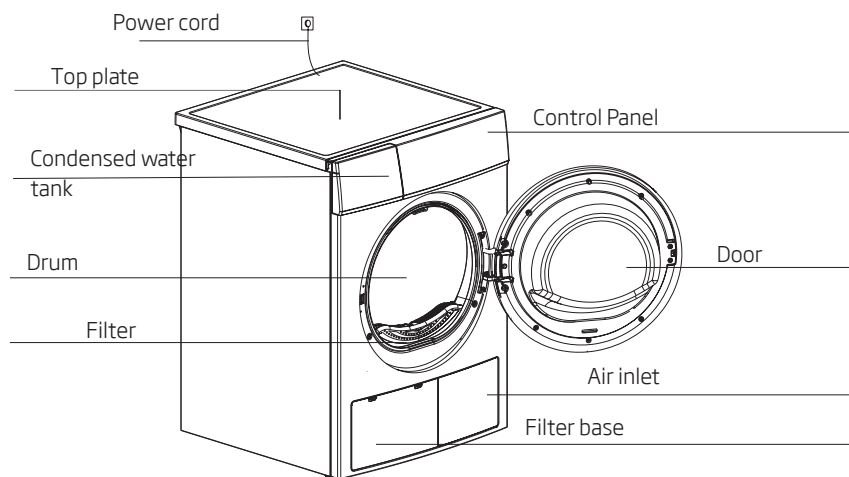


Note! Familiarise yourself with the appliance.

2

Accessories:

- The following items are optional depending on the model.


If your tumble dryer comes with the following parts, they must be installed in accordance with the instructions below. Wear protective gloves during installation.

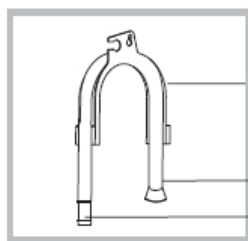

Install drain hose only when you want the condensate to drain directly into the sewer system rather than condensate tank.

3

Installation Steps:

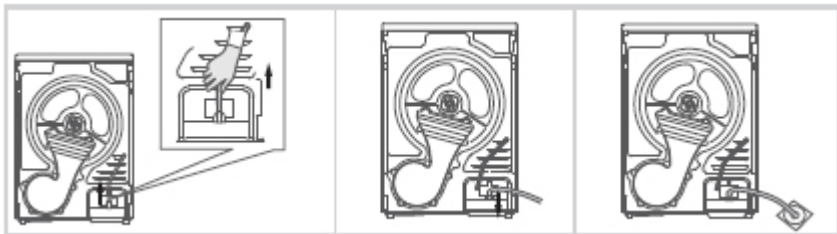

Pull out the upper drain hose.

Connect the external drain hose to the water pump.

Connect the external drain hose to the floor drain, being careful not to kink it.

4


Transport

- Transport with care. Do not lift the appliance by any protruding parts. Never lift the appliance by the door. Do not transport the dryer horizontally.

5

Correct installation position


- For convenience, it is recommended to place the appliance near a washing machine.
- The dryer must be installed in a clean place, where dirt does not accumulate. Ensure free air circulation around the appliance. Do not block the front air inlet or air intake grilles at the back of the appliance.
- Set the appliance on a hard and level surface to minimize vibration and noise during operation.
- Never remove the feet of the appliance. Do not restrict the clearance under the appliance by placing it on a high carpet, wooden planks or similar objects. This can lead to the appliance overheating.

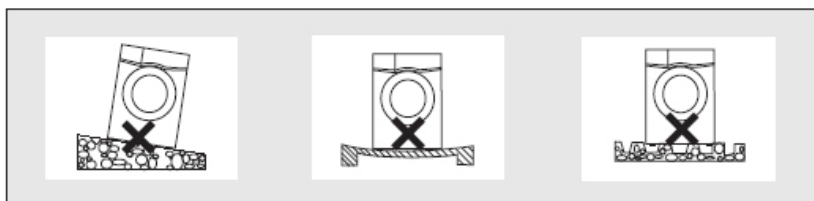

6

Levelling

- When set in place, use spirit level to make sure the dryer is level. Adjust the feet, if necessary.

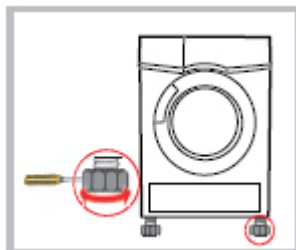


- Make sure the supply voltage matches that on the rating plate.
Do not connect the appliance through any extension cord or an adapter!

7


Quick Start




Before switching on make sure the appliance is correctly installed.

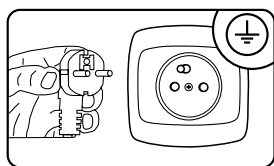

Plug in

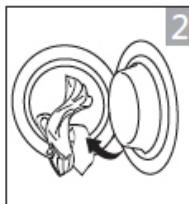

Load the laundry

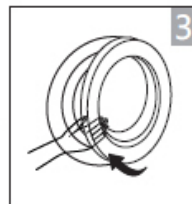

Close the door

Drying:



Power on



Select
a programme




Select the function
or default
programme



Start the appliance

After drying:

■ You will hear a beep and/or "0:00" will be shown on the display.

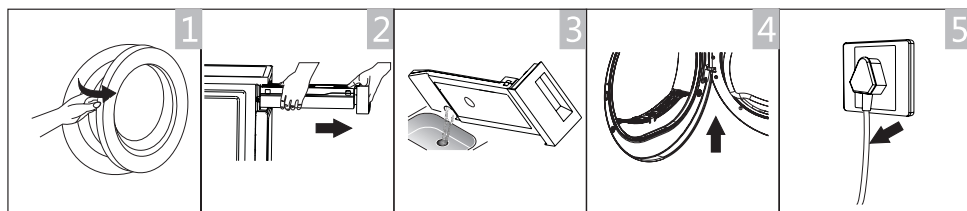

Open the door and
remove the laundry

Remove the
condensate tank

Pour out the
condensate

Clean the filter



Unplug the
appliance



If the wall socket is equipped with a switch, set it in the off position.

Before first use

Leave the appliance to acclimatize for 2 hours after the transport. Before first use, clean the inside of the drum with a soft cloth.

1. Put some clean towels in the drum.
2. Plug in the appliance into the power outlet and then press .
3. Select the [Drying Time], and press the .
4. When the programme completes, clear the filter according to the "Cleaning and Care" chapter.

During drying, you will hear the compressor and water noise, which is completely normal.

Only dry items that are suitable for tumble drying. The laundry care labels:



Tumble dry possible



Normal drying cycle: Tumble drying is possible with normal load and temperature of 80°C.














Gentle drying process: Use caution when tumble drying. Drying at lower temperature setting.



Do not tumble dry: Items that are not suitable for tumble drying.

Before each drying:

1. Spin the laundry in the washing machine before tumble drying. The high spin speed can reduce the drying time and save energy.
 2. To make sure the drying results are uniform, sort the laundry by fabric type and drying programme.
 3. Before the drying close the locks, hooks and buttons, fasten the belts, etc.
 4. Do not over-dry clothes, as they can easily crease.
 5. Do not dry rubber and elastic materials.
 6. To prevent scalding from steam and hot parts, only open the door after the drying cycle is finished.
 7. To avoid extended drying cycles and increased energy consumption, clean the appliance filters after each use.
 8. Do not dry clothes after dry cleaning.
 9. Select the correct programme to dry woollen clothing to make the fabric fresh and fluffy.
- Approximate weight of dry clothes (each garment)



| | | | |
|---|---|--|---|
| Clothes made of mixed fibres (approx. 800g)  | Jacket (about 800 g for cotton)  | Jeans (approx. 800 g)  | Quilt (approx. 900 g for cotton)  |
| Bedsheet (approx. 600 g for cotton)  | Working clothes (approx. 1120 g)  | Pyjama, nightdress (approx. 200 g)  | Long sleeve shirt (approx. 300 g for cotton)  |
| Short sleeve shirt (approx. 180 g for cotton)  | Shorts (approx. 70 g for cotton)  | Socks (approx. 50 g for mixed fabric)  | |



Never overload the appliance.

Do not dry wet clothes dripping water. This may damage the dryer or cause a fire.

DISPLAY AND CONTROL PANEL

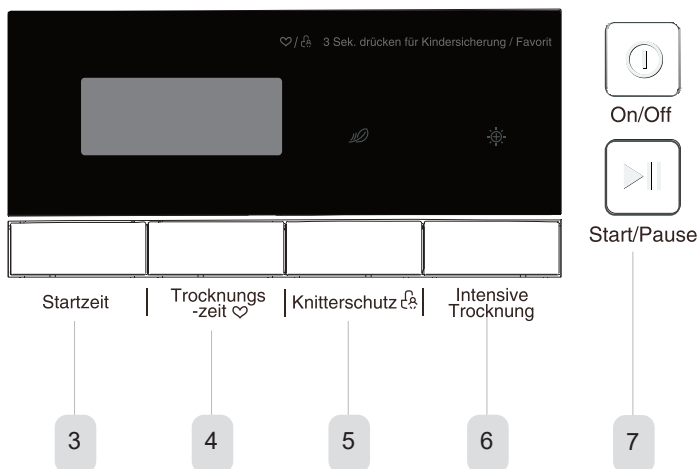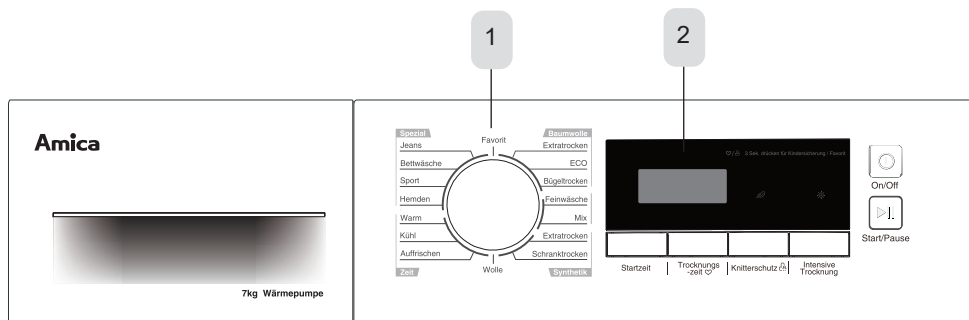



1. Programme selector knob
2. Display
3. Delay Start button [Startzeit]
4. Drying Time button [Trocknungszeit] / My cycle
5. Anti-Crease [Knitterschutz] / Child Lock
6. Extra Dry [intensive Trocknung]
7. Start/Pause button

DISPLAY AND CONTROL PANEL

1

Programme selector knob

- Touch  When the LCD display lights up turn the programme selector knob and select the desired programme
- Selectable functions: [Delay Start], [Drying Time], [Anti-Crease], [Extra Dry]
- Touch 

2

Display



Delay



Child Lock



The remaining time indicator / error message



Clear filters (warning)



Anti-Crease







Extra dry

Delay Start

- Use this function to delay drying for up to 24 hours. When Delay Start is activated, the display counts down the delay time and the delay start icon flashes.

A detailed procedure:

- Load the drum and make sure that the appliance door is closed.
- Press  and then rotate the program selector knob to the desired programme.
- Select [Iron Dry], [Beep] as needed.
- Press the [Delay Start] button.
- Press [Delay Start] repeatedly until a suitable time delay is reached.
- Press  to start a drying programme.
- The drying programme starts automatically after the delay time.
- Press  again to pause the Delay function.
- Press  to cancel the Delay Start function.



Always set the Delay Start function last! An extra feature of the main programme. The Time Remaining function will be cancelled if you change any drying programme settings.

Drying Duration

When you select the Warm air, Cold air or Refresh, you can use the [Drying Time] to adjust the drying time in steps of 10 minutes.

Anti-Crease

- Once the programme has ended, the function operates for 60 minutes (default) or 30, 90, 120 minutes (when selected).
- This feature prevents creases in clothing. You can remove the laundry during the Anti-crease phase except [Warm Timed Drying], [Cold Timed Drying] and [Refresh]. You can select this function in all other programmes.

6

Extra dry

Use this function to adjust clothes drying level.

- You can only activate Drying Level function before the programme starts.
- Press the [Extra Dry] button to select the drying time.
- Except for the [Iron Dry Cotton] [Delicates] [Wool] [Drying Time] programmes, the [Extra Dry] function can be selected in all other programmes.

7

Start/Pause button

Press the Start / Pause button to start or pause the drying cycle.

Child Lock

1. The Child Lock feature disables the control panel to prevent accidental operation by children.
2. To enable the Child Lock during the drying cycle, simultaneously press and hold for 3 seconds the [5] button. When the Child Lock function is set, the display will show the [Child Lock] pictogram and only ⓘ can be used. To disable the Child Lock simultaneously press and hold for 3 seconds the [5] button.



My Favourites

You can use this function to save your favourite programmes, which are used most often.

1. Use the selector knob to select the required programme and other drying functions.
2. Press and hold the [4] button for 3 seconds until you hear a beep – the selected programme has been saved.
3. Rotate the programme selector knob to the [My favourites] position and run your favourite programme.
4. To change the setting for [My Favourites], repeat step (1) and (2).

USE THE APPLIANCE

Select Programme


1. When the LED display becomes brighter, turn the programme Selection knob to select the desired programme.
2. Select the [Delay Start], [Drying Time], [Extra Dry], [Anti-Crease] for additional options.
3. Touch 
4. Press the  button when the programme is completes.

Start programme

The drum starts to rotate when you start the programme. The programme phase indicator light on the display turns on, showing the remaining programme time.

End programme

The drum stops when programme completes. The display will show "0:00" and the "End" cycle phase indicator and the corresponding LED indicator will be on. If you do not remove the load, the dryer will activate the [Iron Dry] function.


After unloading the dryer, press  and then pull out the plug from the wall socket to disconnect the power.



If the drying cycle stops unexpectedly or the dryer displays an error, please refer to the "Troubleshooting" section.

MAINTENANCE AND CLEANING

Empty the water container

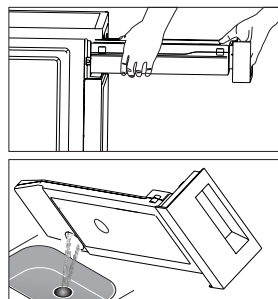- Pull out the water container with your both hands;
- Pour the condensed water into the sink.
- Replace the water container.




Empty the water after each use. Otherwise, the programme will stop and  will light up. After emptying the condensed water container, you can restart the dryer by pressing .

Do NOT drink the condensed water!

Do not use the dryer without water container in place.

Clean the main filter

- This dryer has a lint filter which captures lint and loose fibres from the dried laundry. Clean the filter after each drying cycle.
- Open the door.
- Remove the main filter
- Open the filter and remove the accumulated lint, then rinse under running water.
- Thoroughly dry the filter before replacing it.

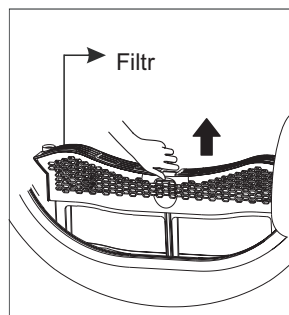


When installing, pay attention to the filter direction.



Do not touch the heat exchanger as this may cause risk of injury and damage to the heat exchanger.

About every two months or when necessary, use a vacuum cleaner to remove fluff, threads and fibres from the heat exchanger. Clean the heat exchanger without exerting pressure on its surface. Otherwise you can damage the heat exchanger.


To remove a foreign object from the filter chamber, first take out the filter, then open the heat exchanger chamber and remove the object. To avoid injury, do not touch the heat exchanger with bare hands.

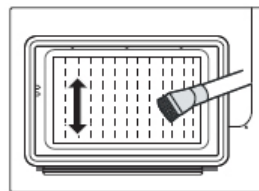

Clean the dryer



- Remove the plug from wall outlet before cleaning!
- Clean the dryer with a clean damp cloth. Cleaning agents may damage the plastic surfaces and other parts.
- Wear gloves when cleaning.
- Prepare a clean cloth damp with water.
- Clean the door, in particular inside the door window.
- Clean the seals around the front bracket.
- Clean humidity sensor inside the drum.
- Remove all the filters, clean the seals and air ducts. Before using the dryer wipe all the items dry with a soft cloth.

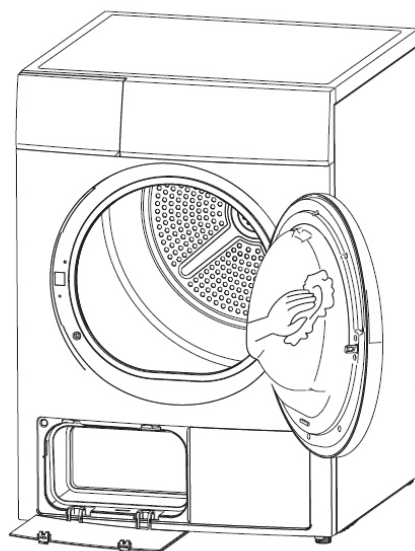





TROUBLESHOOTING


| Display | Possible cause | Solution |
|---------|--|--|
| E20 | Container is full | Empty water container |
| | Water pump failure or water level sensor failure | If this problem occurs, contact your local service centre. |
| E33 | Temperature sensor failure | |
| E82 | PCB communication error | |



- Repairs may only be performed by an authorised technician. Repairs carried out by unqualified persons may seriously endanger the appliance user.
- Before contacting customer support, complete all the steps provided in the operating instructions to troubleshoot the problem.
- If other messages appear on the display and the dryer does not work, contact your contact your local service centre.
- You could be charged for the service call even during the warranty period.

| Problem | Solution |
|---|---|
| The display is not turned on | <p>Check the power supply. Make sure the plug is properly inserted into the wall outlet. Check the selected programme. Touch </p> |
|  lights up | <p>Check the water tank. If the water tank is full, drain the condensation and restart the dryer. If the water tank is not full, restart the dryer. If the  indicator is still on after the first two steps have been performed, call service.</p> |
|  lights up | <p>Clean the heat exchanger Clean the filter.</p> |
| The dryer does not start | <p>Connect the dryer to the electricity supply. Turn on the tumble dryer. Make sure the door is properly closed. Make sure a programme has been selected. Check if the Start button is pressed.</p> |
| The laundry is not sufficiently dry or drying time is too long | <p>Remove lint, fibres and threads from the filter and clean heat exchanger. Empty the container. Check the drain hose. Dryer is encased too tightly. Clear moisture sensor. Do not block the air intake. Apply a more intense drying programme or extend the drying duration.</p> |
| You can hear a humming noise | <p>The compressor is running. These noises are normal and do not indicate a fault.</p> |
| The dryer turns off at the end of the programme | <p>The dryer turns off automatically to save energy. This is not a malfunction but rather normal operation of the appliance.</p> |



- If you are unable to resolve the issue, please contact our customer support team for assistance.
- Touch 
- Unplug the appliance and call service.

For more information about the product, please refer to the EU EPREL Product Database at <https://eprel.ec.europa.eu>. For more information, please use your mobile device to scan the QR code on the energy label or enter the product model listed on the energy label in the EPREL search engine <https://eprel.ec.europa.eu/>

WARRANTY AND AFTER-SALES SERVICE

Warranty

Warranty service as stated on the warranty card. The manufacturer shall not be held liable for any damage caused by improper use of the product.

Service

- The manufacturer recommends that all repairs and adjustments be carried out by the Factory Service Technician or the Manufacturer's Authorized Service Point. For safety reasons, repairs should be referred to professionals.
- Repairs carried out by unqualified persons may seriously endanger the appliance user.
- Pursuant to Commission Regulation (EU) 2023/2534, the minimum availability period for spare parts necessary to repair the appliance is 7 or 10 years depending on the type and purpose of the spare part.
- The list of spare parts and the ordering procedure are available on the websites of the manufacturer, importer or an authorized representative.
- The minimum warranty period for the appliance offered by the manufacturer, importer or authorized representative is given in the warranty card.
- The warranty shall be void if you make any independent adaptations or alterations, tamper with seals or other appliance safety devices or its parts or interfere with the appliance contrary to operating instructions.

In the event of appliance malfunction, request assistance or repair.

If your appliance needs repair, please contact the service centre. Please see warranty card for address and contact details of our service centre. Before contacting us, please have ready the appliance serial number, which can be found on the identification sticker. For your convenience, please write it down below:

| | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|



AMICA S.A.

UL. MICKIEWICZA 52
64-510 WRONKI

TEL. 67 25 46,100

FAX 67 25 40 320

WWW.AMICA.PL