

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Open the door, press the on/off button. Power indicator will be on

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Press the button to select the desired program, the corresponding indicator will light up.
- To set the delay time, press the button (3h / 6h / 9h / 12h).

6 Start your dishwasher

- Open the door the dishwasher.
- The dishwasher will start a wash programme.

7 Turn off the appliance



- Turn the appliance off using the On/Off button.

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.





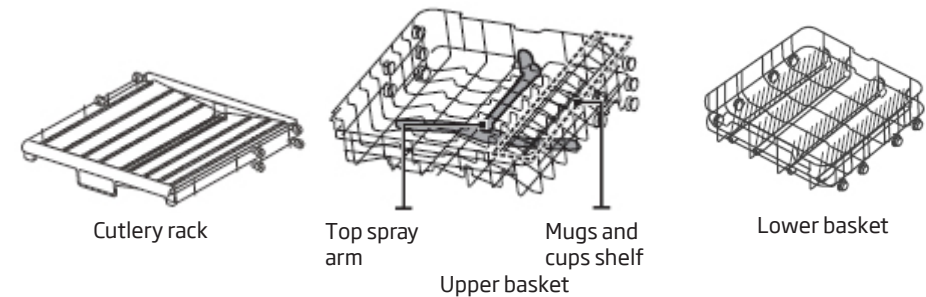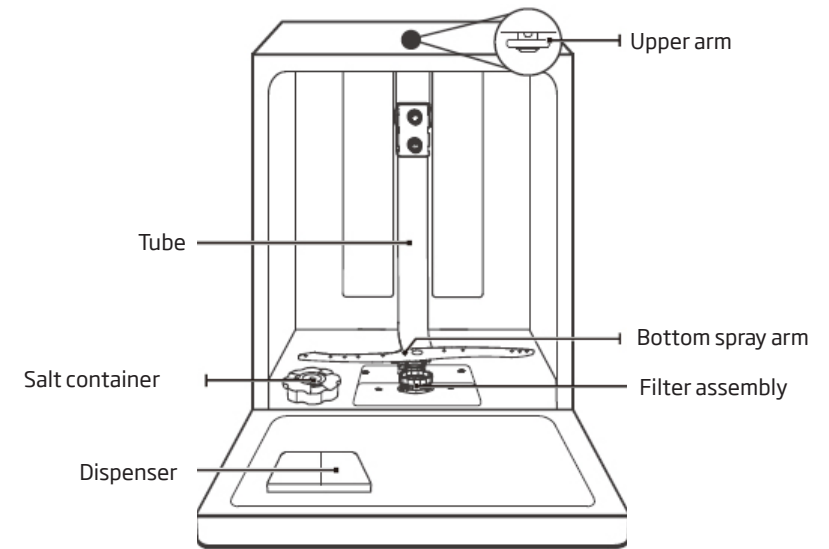

9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator



NOTE: Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: EGSPV 594 910

ITEM	Programme name	The default temperature [°C]	Type of soil	Soil level	Amount of detergent		Type of cycle						Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *
1	Auto 	45-55°	Automatic programme selection for any type of soil, including residual dried food on the dishes.	Varying soil	5g / 30g (1 or 2 items)	Pre-wash 45°C	Automatic wash 45-55°C	Rinse	Rinse 65°C	Dry			150	0.9-1.3	11~15
2	Intensive 	65°	Heavily soiled dishes with dried food residue	Normal soil	5g / 30g (1 or 2 items)	Pre-wash 50°C	Wash 60°C	Rinse	Rinse	Rinse 70°C	Dry		170	1.6	18.5
3	**ECO 	45°	Lightly soiled glass-ware and porcelain	Light soil	5g / 30g (1 or 2 items)	Pre-wash	Wash 45°C	Rinse 65°C	Dry				195	0.93	11
4	Glass 	40°	For lightly soiled crockery and glass.	Light soil	5g / 30g (1 tablet)	Pre-wash	Wash 40°C	Rinse	Rinse 60°C	Dry			130	0.9	14.5
5	90 min 	65°	For normally soiled loads that need quick wash.	Light soil	35g (1 tablet)	Wash 65°C	Rinse	Rinse 65°C	Dry				90	1.35	12.5
6	Rapid 	45°	A shorter wash for lightly soiled loads that do not need drying.	Light soil	25g	Wash 45°C	Rinse 50°C	Rinse 55°C					30	0.75	11

** Standard programme This is a reference program for research institutes. Tests according to EN 50242.
This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.