

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

→ Press the power button.

2 Dispense detergent

→ Press the latch to open the detergent dispenser.

→ Add detergent to the dispenser.

3 Check the special salt level

→ Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

→ Remove food leftovers from the dishes

→ Place the dishes in the racks according to loading guidelines.

→ It is recommended to load the lower rack first, then the upper rack.

5 Select the wash programme

→ Press the power button.

→ Select the desired programme and its indicator will light up. Firmly close the door and then, press the Start/Pause button to start the programme.

6 Start your dishwasher

→ Close the dishwasher door.


→ The dishwasher will start a wash programme.

7 Turn off the appliance

→ Turn off the appliance using the [on/off] button

8 Remove dishes from the appliance

→ When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

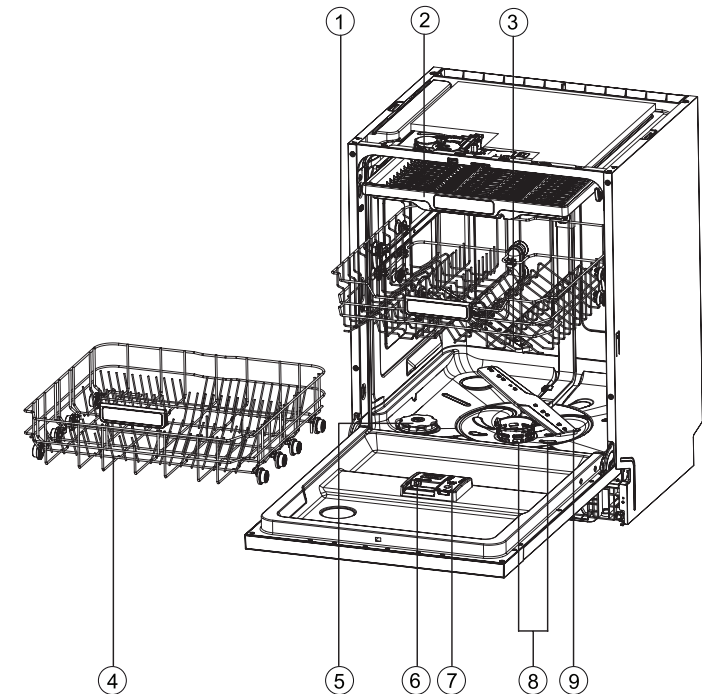

Features and components:

- 1. Upper Basket
- 2. 3rd rack (optional)
- 3. Upper Spray Arm
- 4. Lower Basket
- 5. Salt Container

- 6. Detergent Dispenser
- 7. Rinse Aid Dispenser
- 8. Filtering System
- 9. Lower Spray Arm

TABLE OF WASH PROGRAMMES: EGSPV 581 400

ITEM	Programme name	The default temperature [°C]	Type of soil	Type of cycle	Duration (min.)*	Power consumption (kWh)*	Water consumption (l)*
1	**ECO 	45°	The most efficient program terms of combined energy and water consumption to clean medium soiled dishes kitchenware.	Pre-wash Wash 45°C Rinse Drying	235	0,719	9,5
2	Intensive 	65°	Powerful cleaning mode, suitable for heavy soiled or dried on large items such as dishes, pots and pans.	Pre-wash Wash 65°C Rinse Drying	195	1,143	16,6
3	Universal 	55°	For your daily dirty dishes with optimal energy and water consumption.	Pre-wash Wash 55°C Rinse Drying	145	0,924	13,3
4	Glass 	45°	For gently cleaning lightly soiled glassware and delicate glass items such as crystal by adjusting the temperature and drying time.	Pre-wash Wash 45°C Rinse Drying	135	0,601	13,0
5	60 min 	60°	For cleaning lightly or medium soiled daily dishes at 60 degrees in just one hour.	Wash 60°C Rinse Rinse	60	0,804	10,0
6	Express 	50°	This program is best for lightly soiled or pre-rinsed dishes.	Wash 50°C Rinse Rinse	30	0,417	10,0

** Standard programme This is a reference program for research institutes. Tests according to EN 60436. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.