

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Close the dishwasher door, press the on/off button. Power indicator will be on.

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Close the door, press the Power button.
- Choose a program, the response light will turn on. Then press the Start/Pause button, the dishwasher will start its cycle.

6 Start your dishwasher

- Close the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance


- Turn the appliance off using the On/Off button.

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator

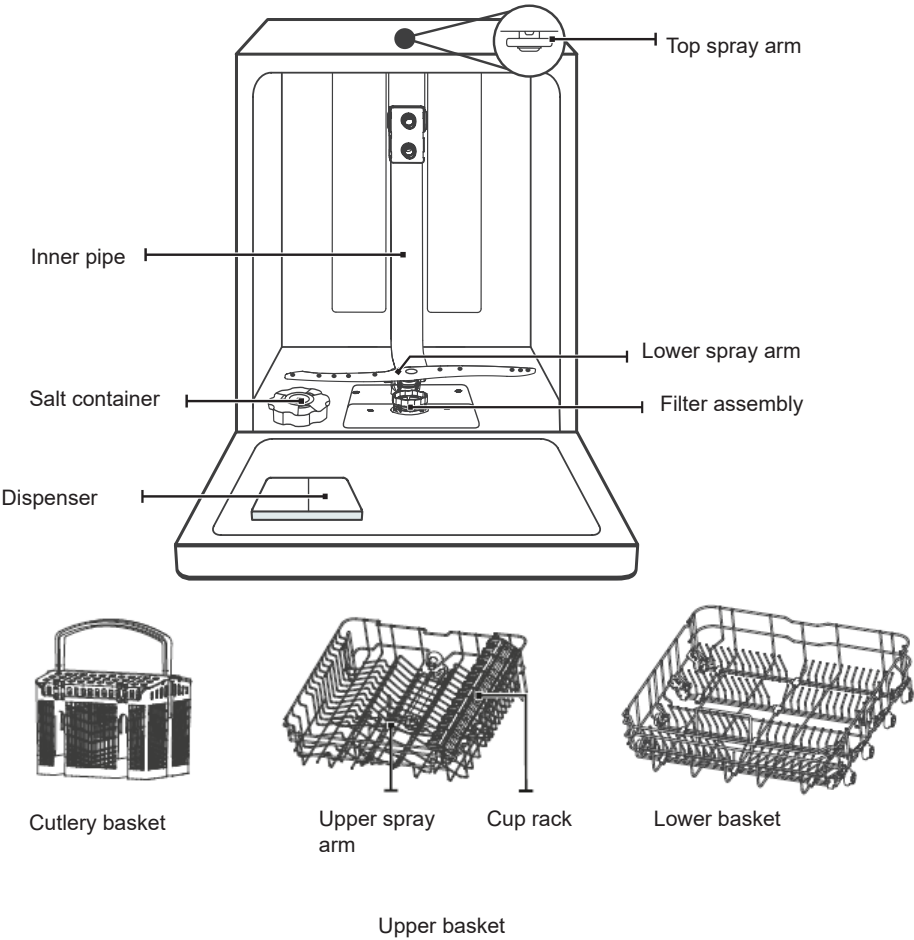

NOTE: Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: GSP 543 912-1 W

ITEM	Programme name	The default temperature [°C]	Type of soil	Amount of detergent	Type of cycle						Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *
1	Intensive 	60°	Heavily soiled dishes with dried food residue.	4g/18g (1 or 2 tablet)	Pre-wash	Wash 60°C	Rinse	Rinse 65-72°C	Dry		175	1.275-1.385	13.9
2	Universal 	60°	For normally soiled crockery, such as pots, plates, glasses and lightly soiled pans.	4g/18g (1 or 2 tablet)	Pre-wash	Wash 60°C	Rinse	Rinse 65-72°C	Dry		150	1.185-1.290	13.9
3	**ECO 	45°	Lightly soiled glass-ware and porcelain.	22g (1 or 2 tablet)	Wash 45°C	Rinse	Rinse 40°C	Dry			255	0.645	10
4	Glass 	45°	For lightly soiled crockery and glass.	4g/18g (1 or 2 tablet)	Pre-wash	Wash 45°C	Rinse	Rinse 55-60°C	Dry		120	0.850-0.925	13.9
5	90 min 	55°	For normally soiled loads that need quick wash.	22g (1 tablet)	Wash 55°C	Rinse	Rinse 60-65°C	Dry			90	0.955-1.030	11.4
6	Rapid 	45°	A short program for lightly dirty dishes that do not require drying.	12g (1 tablet)	Wash 45°C	Rinse	Rinse 45°C				30	0.584	10.5

** Standard programme This is a reference program for research institutes. Tests according to EN 60436.
This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.