

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Close the dishwasher door, press the on/off button. Power indicator will be on.

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Press the button to select the desired program, the corresponding indicator will light up.
- To set the delay time, press the button (3h / 6h / 9h / 12h).

6 Start your dishwasher

- Close the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance



- Turn the appliance off using the On/Off button.

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.





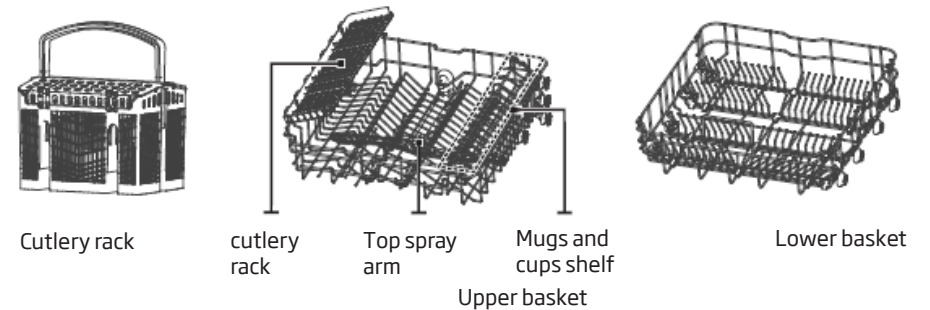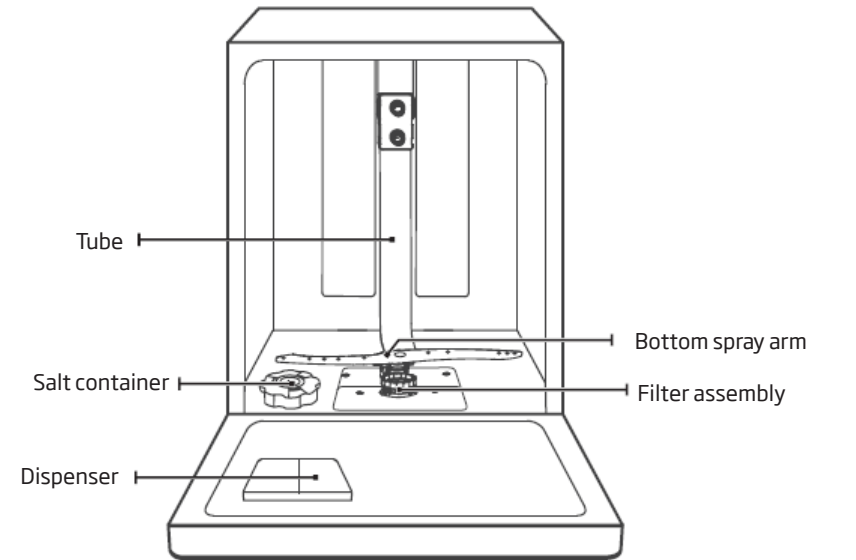

9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator



NOTE: Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: EGSPU 513 911 E

| ITEM | Programme name | The default temperature [°C] | Type of soil | Amount of detergent | Type of cycle | | | | | | | Duration [min.] * | Power consumption | Water consumption [litres] * |
|------|---|------------------------------|--|---------------------|---------------|------------|------------|------------|------------|-----|--|-------------------|-------------------|------------------------------|
| | | | | | | | | | | | | | [kWh] * | |
| 1 | Intensive  | 65° | Heavily soiled dishes with dried food residue. | 4g /17g (1 piece) | Pre-wash 50°C | Wash 65°C | Rinse | Rinse | Rinse 60°C | Dry | | 205 | 1.651 | 18.7 |
| 2 | Universal  | 55° | For moderately soiled dishes such as pots, plates, glasses and lightly soiled frying pans. | 4g / 17g (1 piece) | Pre-wash 45°C | Wash 55°C | Rinse | Rinse | Rinse 60°C | Dry | | 175 | 1.451 | 18.7 |
| 3 | **ECO  | 50° | Lightly soiled glass-ware and porcelain. | 21g (1 piece) | Wash 50°C | Rinse | Rinse 50°C | Dry | | | | 198 | 0.836 | 11.0 |
| 4 | Glass  | 50° | For lightly soiled crockery and glass. | 4g / 17g (1 piece) | Pre-wash 40°C | Wash 50°C | Rinse | Rinse 50°C | Dry | | | 120 | 0.902 | 15.2 |
| 5 | 90 min  | 55° | For normally soiled loads that need quick wash. | 4g / 17g (1 piece) | Wash 55°C | Rinse | Rinse 50°C | Dry | | | | 90 | 0.891 | 11.5 |
| 6 | Rapid  | 40° | Short rinse for slightly soiled dishes without drying. | 12g | Wash 40°C | Rinse 40°C | Rinse 55°C | | | | | 30 | 0.781 | 11.0 |

** Standard programme This is a reference program for research institutes. Tests according to EN 60436.
This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.