

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

## 1 Turn on the appliance

- Close the dishwasher door, press the on/off button. Power indicator will be on.

## 2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

## 3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

## 4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

## 5 Select the wash programme

- Select the desired programme and its indicator will light up.

## 6 Start your dishwasher

- Close the dishwasher door.
- The dishwasher will start a wash programme.

## 7 Turn off the appliance


- Turn the appliance off using the On/Off button.

## 8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

## 9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator

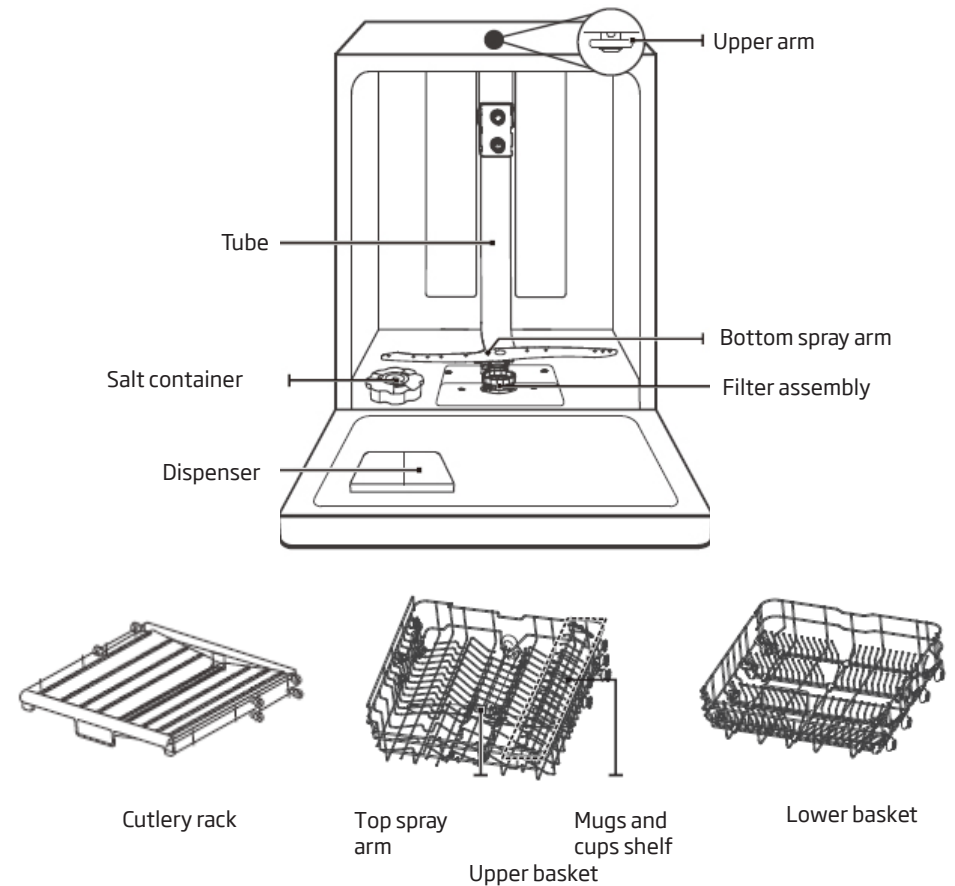

**NOTE:** Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: EGSP 574 930-1 E

ITEM	Programme name	The default temperature [°C]	Type of soil	Soil level	Amount of detergent		Type of cycle					Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *
1	Auto	55-65°	Automatic programme selection for any type of soil, including residual dried food on the dishes.	Varying soil	5g/30g (1 or 2 items)	Pre-wash 45°C	Automatic wash 55-65°C	Rinse	Rinse	Rinse 50-55°C	Dry	85-150	1.05-1.55	10.6~15.9
2	Intensive	65°	Heavily soiled dishes with dried food residue	Normal soil	5g / 30g (1 or 3 items)	Pre-wash 50°C	Wash 65°C	Rinse	Rinse	Rinse 60°C	Dry	205	1.651	16.5
3	Universal	55°	For normally soiled crockery, such as pots, plates, glasses and lightly soiled pans.a	Universal soil	5g / 30g (1 or 3 items)	Pre-wash 45°C	Wash 55°C	Rinse	Rinse	Rinse 60°C	Dry	175	1.451	16.5
4	**ECO	50°	Lightly soiled glass-ware and porcelain	Light soil	5g / 30g (1 or 2 items)	Wash 50°C	Rinse	Rinse 50°C	Dry			198	0.833	10.0
5	Glass	50°	For lightly soiled crockery and glass.	Light soil	5g / 30g (1 or 2 items)	Pre-wash 40°C	Wash 50°C	Rinse	Rinse 50°C	Dry		120	0.902	13.5
6	90 min	55°	For normally soiled loads that need quick wash.	Light soil	35g (1 tablet)	Wash 55°C	Rinse	Rinse 50°C	Dry			90	0.891	10.3
7	Rapid	40°	A short program for lightly dirty dishes that do not require drying	Light soil	15g (1 tablet)	Wash 40°C	Rinse 40°C	Rinse 55°C				30	0.781	11.0
8	Soak	--	For rinsing dishes that will be washed later in the day.	--	--	Pre-wash						15	0.02	4

\*\* Standard programme This is a reference program for research institutes. Tests according to EN 50242. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

\* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.

## DISHWASHER QUICK START GUIDE: EGSP 574 930-1 E

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

### 1 Turn on the appliance

- Close the dishwasher door, press the on/off button. Power indicator will be on.

### 2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

### 3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

### 4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

### 5 Select the wash programme

- Select the desired programme and its indicator will light up.

### 6 Start your dishwasher

- Close the dishwasher door.
- The dishwasher will start a wash programme.

### 7 Turn off the appliance



- Turn the appliance off using the On/Off button.

### 8 Remove dishes from the appliance


- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

### 9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator

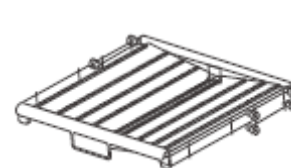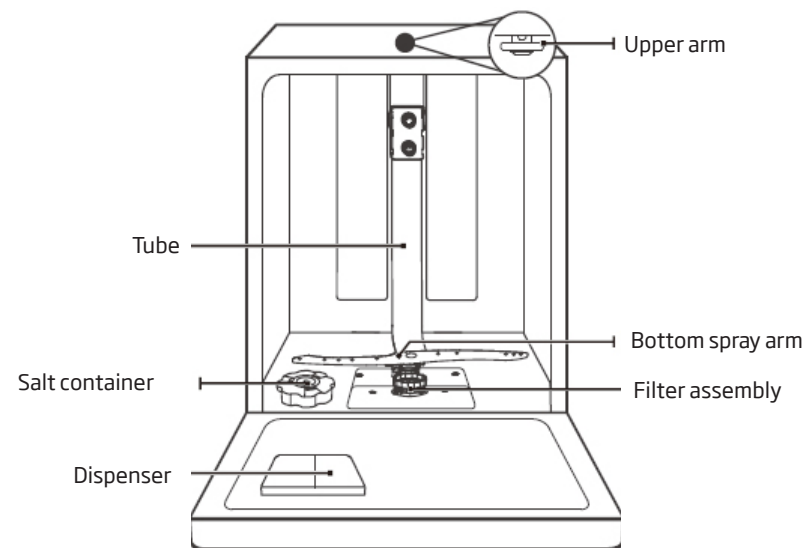

Cutlery rack

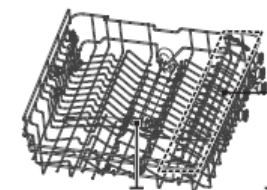

Top spray arm



Mugs and cups shelf



Lower basket



**NOTE:** Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: EGSP 574 930-1 E

ITEM	Programme name	The default temperature [°C]	Type of soil	Soil level	Amount of detergent		Type of cycle					Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *
1	Auto	55-65°	Automatic programme selection for any type of soil, including residual dried food on the dishes.	Varying soil	4g/18g (1 or 2 items)	Pre-wash 45°C	Automatic wash 55-65°C	Rinse	Rinse	Rinse 50-55°C	Dry	85-150	1.05-1.55	10.6~15.9
2	Intensive	65°	Heavily soiled dishes with dried food residue	Normal soil	4g/18g (1 or 3 items)	Pre-wash 50°C	Wash 65°C	Rinse	Rinse	Rinse 60°C	Dry	205	1.651	16.5
3	Universal	55°	For normally soiled crockery, such as pots, plates, glasses and lightly soiled pans.a	Universal soil	4g/18g (1 or 3 items)	Pre-wash 45°C	Wash 55°C	Rinse	Rinse	Rinse 60°C	Dry	175	1.451	16.5
4	**ECO	50°	Lightly soiled glass-ware and porcelain	Light soil	4g/18g (1 or 2 items)	Wash 50°C	Rinse	Rinse 50°C	Dry			198	0.849	10.0
5	Glass	50°	For lightly soiled crockery and glass.	Light soil	4g/18g (1 or 2 items)	Pre-wash 40°C	Wash 50°C	Rinse	Rinse 50°C	Dry		120	0.902	13.5
6	90 min	55°	For normally soiled loads that need quick wash.	Light soil	22g (1 tablet)	Wash 55°C	Rinse	Rinse 50°C	Dry			90	0.891	10.3
7	Rapid	40°	A short program for lightly dirty dishes that do not require drying	Light soil	12g (1 tablet)	Wash 40°C	Rinse 40°C	Rinse 55°C				30	0.781	11.0
8	Soak	--	For rinsing dishes that will be washed later in the day.	--	--	Pre-wash						15	0.02	4

\*\*

Standard programme This is a reference program for research institutes. Tests according to EN 60436.  
This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

\*

Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.