

Dear Customer,

This Quick Start Guide is enclosed with detailed washing machine operating instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.


Before plugging your appliance into the mains power, remove the transport bolts and level the appliance. Do not start the washing machine before it is properly set up.

Only wash delicate fabrics, synthetics, wool using

designated programs. Only load such fabrics according a table of the maximum load sizes (see page 2).

The correct appliance operation extends its lifetime so make sure the drum seal is dry (leave the door ajar after washing). Clean the appliance with mild cleaning agents, do NOT scrub with abrasive agents.

1 Before you start washing



- Empty pockets.
- Close all zips and button up duvet covers.
- Wash delicate and small items in a protective mesh laundry bag.
- Open the appliance door by pressing the handle on the inside.
- Insert the sorted clothes into the washing machine:
 - Cotton — max full drum.
 - Synthetics — max ½ of the drum.
 - Silk, wool — max ¼ of the drum.
- Close the door, press firmly against the seal.

2 Add detergent

- Open the detergent drawer by pulling the handle.
- Pour the recommended dose of washing detergent into the appropriate compartment of the detergent drawer.
- Add fabric conditioner to the appropriate compartment if required.
 - II MAIN WASH detergent.
 - III Fabric softener or other special care liquids
 - I PREWASH detergent.

3 Select a washing programme

- Set the programme selector knob to the desired programme.
- Customize the programme to your needs — you can change the temperature, spin speed, or enable additional features.
- Select additional functions - described in the "Table of programmes" (see page 2).

4 Select START

- Close the appliance door.
- Turn the programme selector to the desired programme (see page 2).
- Select additional functions or wash cycle parameters as required — according to your needs.
- Select Time Remaining ranging from 0 to 24 hours.
- Then press the START/ PAUSE button


5 End of the wash

- End of the wash cycle is indicated by acoustic signal (if active). The display shows END and the door lock indicator light goes out.
- Close the water valve.
- Turn washing machine off.
- Unplug the appliance from the wall outlet.
- Open the door and remove laundry. Once clothes are removed, leave the door slightly ajar to allow the drum seal to dry before the door is closed properly. Leave the detergent drawer compartment slightly ajar to allow it to dry.



1. Detergent drawer
2. Drum
3. Programme selector dial
4. Control panel / Display
5. Door handle
6. Pump filter cover

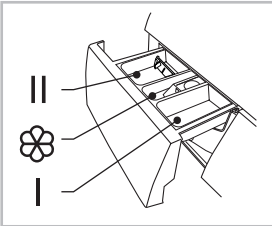

1



7. Time Remaining
8. Temperature
9. Spin
10. Soil level
11. Options
12. OptiTime
13. Extra Rinse

9+10. Acoustic Signal On/Off
10+11. Child Lock

TABLE OF PROGRAMMES: WA 484 091

ITEM	Programme name	The default temperature	Default spin speed [RPM]	Maximum load [kg]	Additional functions available					Detergent drawer			Time [h:min]	Power consumption [kWh]	Water consumption [l]	Number of rinses	Steam Power PRO	Type of laundry
		[°C]																
					Soil level	Extra Rinse	Prewash	Eco Wash	Rapid Wash	Prewash I	Main wash II	Fabric softener III						
1	Eco 40-60	--	1400	8.0						✕	●	○	03:38	0.472	48	2		Use this programme to preserve colours of coloured clothes Default 40°C cannot be selected, can be washed at around 40°C–60°C.
2	Cotton	40°	1200	8.0	✓	✓	✓	✓	✓	○	●	○	03:39	0.998	71	2	✓	Hard-wearing fabrics, cotton heat-resistant fabrics or underwear.
3	Baby Pro	60°	800	8.0	✓	✓	✓	✓		○	●	○	02:01	1.317	71	3	✓	Use this programme to wash your baby's clothes to make them cleaner and improve rinsing efficiency to protect baby's skin.
4	Easy Iron	30°	800	4.0	✓	✓	✓	✓		○	●	○	01:00	0.333	44	2	✓	Designed for washing shirts.
5	Sport	20°	800	4.0	✓	✓	✓	✓		○	●	○	00:45	0.155	44	2	✓	Sports wear and leisure wear with Microfibre.
6	Anti-mites	40°	800	4.0		✓				✕	●	○	03:48	0.779	60	2	✓	Eliminate bacteria and mites to protect your health.
7	Colour protection	Cold water	1000	4.0	✓	✓		✓		✕	●	○	01:18	0.137	44	3	✓	Washing dark clothes to better preserve colours.
8	Auto 30°C	30°	800	8.0						✕	●	○	01:04	0.481	71	2	✓	More effective energy saving, reduced washing time.
9	Cotton 20°C	20°	1000	4.0		✓		✓		✕	●	○	01:01	0.183	44	2		Cotton fabrics.
10	Pets	40°	800	8.0		✓	✓	✓		○	●	○	01:37	0.784	71	3		Thoroughly clean pet hair from clothing, stop the growth of germs.
11	Synthetics	40°	1200	4.0	✓	✓	✓	✓	✓	○	●	○	03:18	0.727	44	2		Very dirty clothes, clothing made from synthetic fabrics or natural-synthetic fabric blends (nylon, shirts, blouses).
12	Wool 	40°	600	2.0		✓				✕	●	○	01:07	0.410	60	2		Note: Do not machine wash woollen fabrics if the cloth tag prohibits.
13	Hand wash	30°	600	2.5		✓				✕	●	○	00:50	0.263	34	2		Very delicate fabrics, for example made of silk, satin, synthetic fibres or blended fabrics.
14	Refresh 	Cold water	800	2.0		✓				✕	●	○	00:15	0.030	31	2		Very short programme, suitable for lightly soiled laundry, for example a small amount of laundry.
15	Antiallergic	60°	800	4.0		✓				✕	●	○	04:31	1.159	60	4		The washing machine can effectively neutralise some allergens and achieve antiallergic effect by adjusting the high temperature of 60°C to achieve sterilising effect.
16	Sterilise 70°C	70°	800	4.0		✓				✕	●	○	02:27	1.094	60	2		A washing machine can kill some bacteria and provide a hygienic effect.

* Use this programme to preserve colours of coloured clothes Default 40°C cannot be selected, can be washed at around 40°C–60°C.

** The most efficient programmes in terms of energy and water consumption are generally those that are run at lower temperatures and for longer time.

*** You will save energy and water by loading your household appliance to the full capacity indicated by the manufacturer for the appropriate programmes.

NOTE: Actual water temperature may differ from the declared wash cycle temperature.

NOTE: Above mentioned time is an estimate and may differ from actual wash cycle time, depending on temperature, water pressure, load size, etc. The time is automatically updated during wash cycle. Displaying the same time for an extended period or abrupt time indication changes are normal.

WASHING PROGRAMMES TABLE							
Cycle	Nominal capacity in kg	Temperature setting	Cycle duration in hours and minutes	Energy consumption in kWh/operating cycle	Water consumption in liter/operating cycle	Highest temperature °C ¹⁾	Residual moisture in % /spin speed ²⁾
Cotton 20°C	4.0	20	1:01	0.183	44	20	65%/1000
Baby Pro	8.0	60	2:01	1.317	71	60	70%/800
Cotton	8.0	60	3:44	1.498	71	60	53%/1400
Express 15'	2.0	cold	0:15	0.030	31	cold	70%/800
Synthetics	4.0	40	3:18	0.727	44	40	35%/1200
Eco 40-60 ³⁾	8.0	--	3:38	0.760	61	35	53.9%/1350
	4.0	--	2:48	0.412	45	28	53.9%/1350
	2.0	--	2:48	0.208	36	25	53.9%/1350

- The above data is for reference only, and the data may change due to different actual use conditions.
- The values given for programmes other than the Eco 40-60 programme are indicative only.
- Cotton 20°C program is able to clean lightly soiled cotton laundry, at a nominal temperature of 20°C, which complies with the regulation (EU) 2019/2023.
- Concerning to EN 60456:2016/A11:2020 With (EU)2019/2014, (EU)2019/2023, (EU)2021/340, (EU)2021/341

The EU energy efficiency class is: A
Energy test program: Eco 40-60. Other as the default.
Half load for 8.0kg machine: 4.0kg.
Quarter load for 8.0kg machine: 2.0kg.

¹⁾ The highest temperature reached by the laundry in the wash cycle for at least 5 minutes.
²⁾ Residual moisture after the wash cycle in water content percent and the spin speed at which this was achieved.
³⁾ The ECO 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. This programme is used to assess the compliance with the regulation (EU) 2019/2023.

The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.
Loading the household washing machine up to the capacity indicated for the respective programmes will contribute to energy and water savings.
Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.

